




QZ-PH/0-10V

Installation Instructions

TOP VIEW

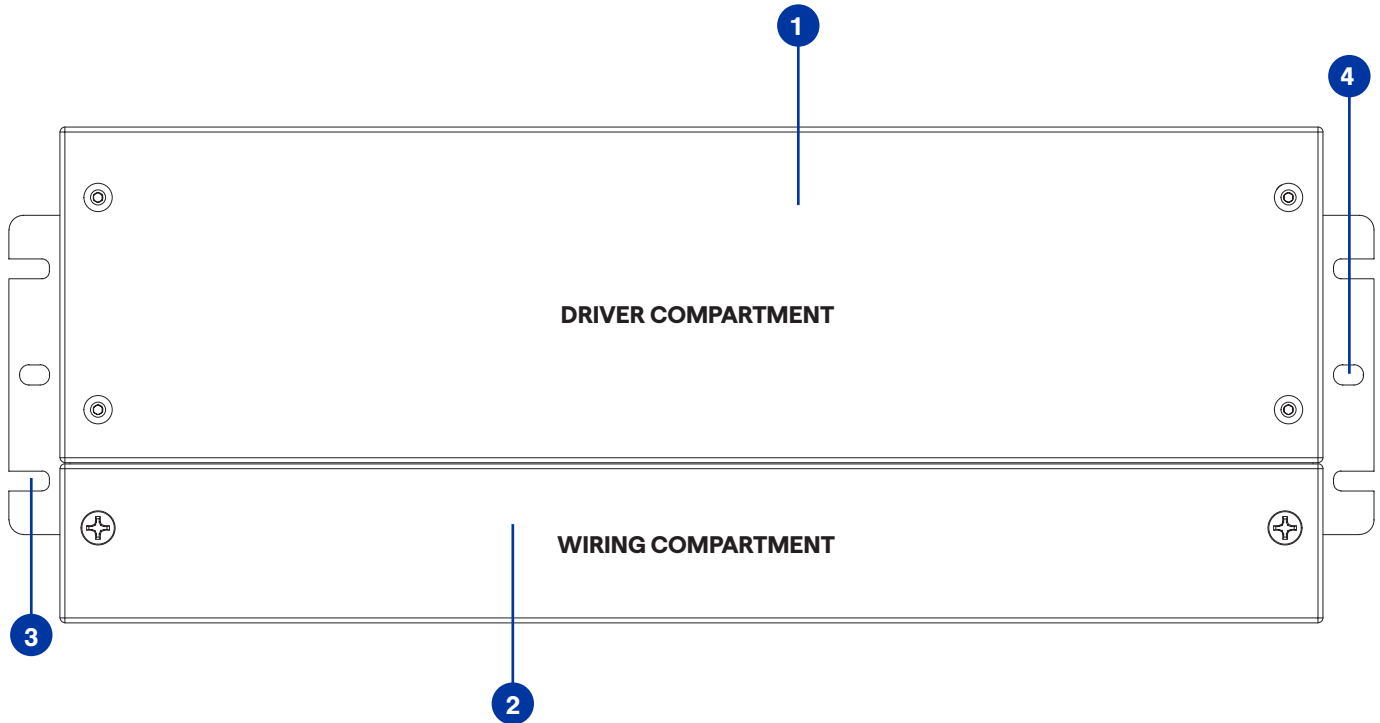

QZ Components

- | | | | |
|----------------------|----------------------|----------------------|----------------------|
| 1 Driver Compartment | 2 Wiring Compartment | 3 Mounting Tab Slots | 4 Mounting Tab Holes |
|----------------------|----------------------|----------------------|----------------------|




QZ-PH/0-10V


Installation Instructions

3

When installing multiple QZ power supplies, separate the enclosures by 3" of space from edge to edge. This prevents the rise of ambient temperature between the power supplies.

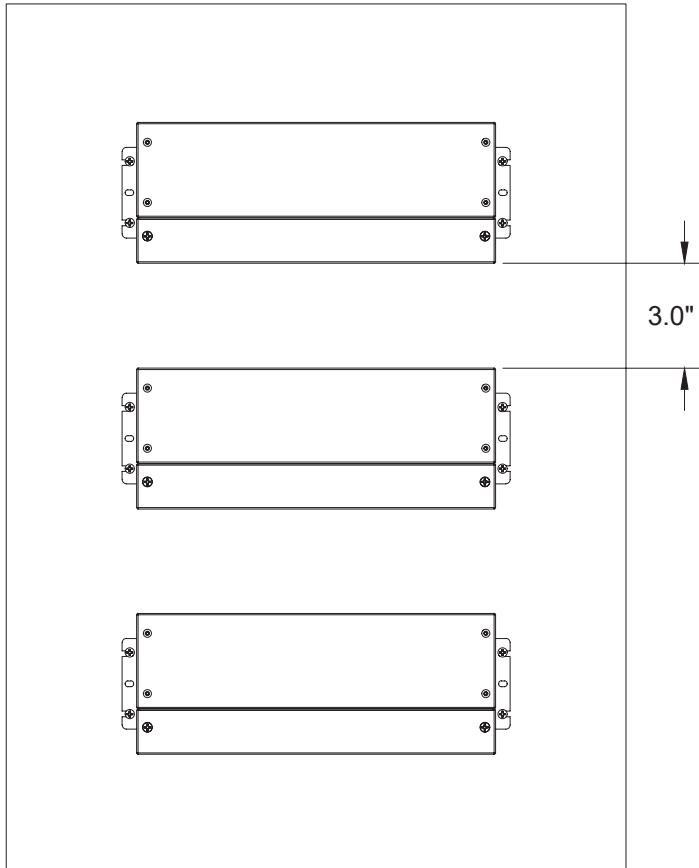

Horizontal mount illustrated above

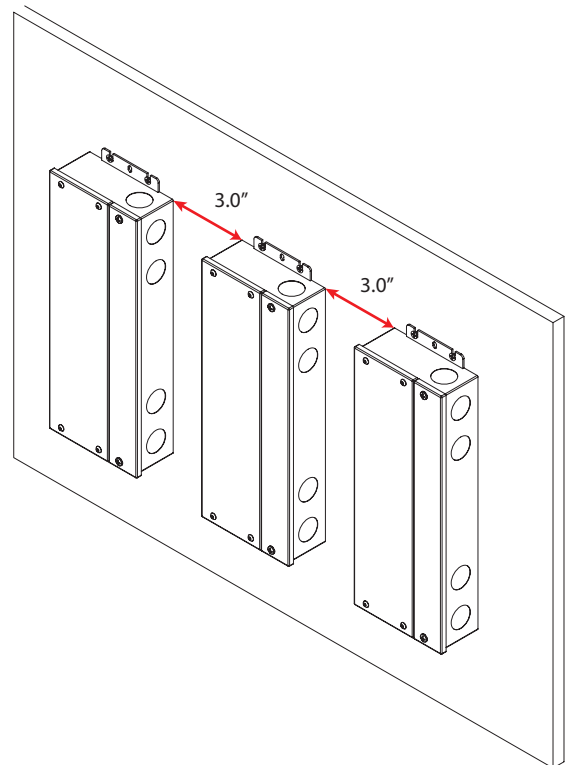

Vertical mount illustrated above



 



QZ-PH/0-10V

Installation Instructions





4

Wiring diagram

Phase Dimming

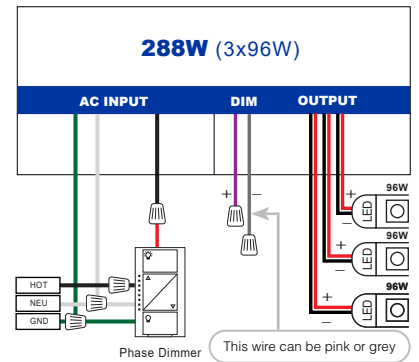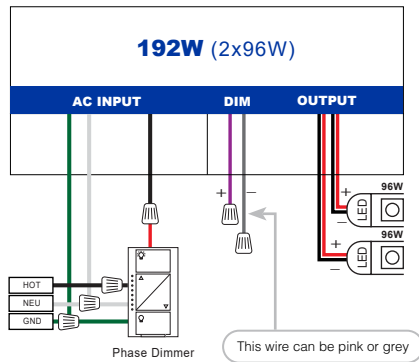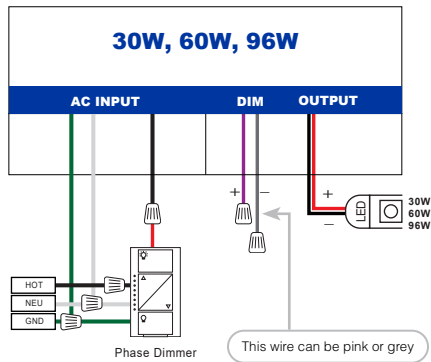

0-10V Dimming

 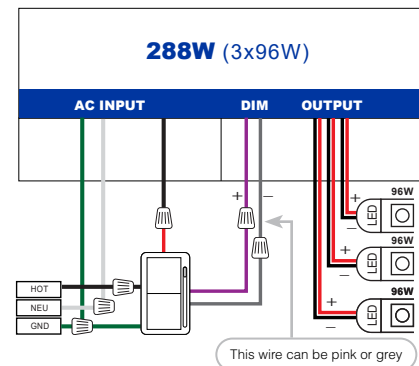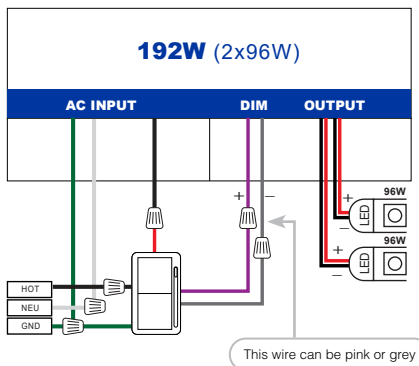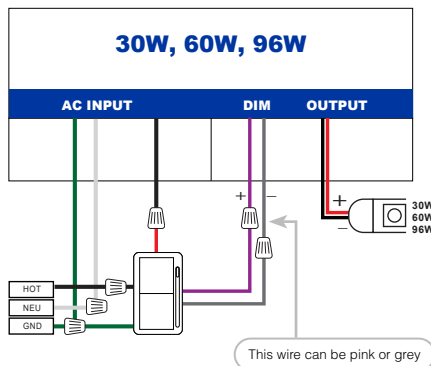

Wiring from power supply to light fixture must be two conductor cable




QZ-PH/0-10V



Installation Instructions

QZ 30W

TOP VIEW

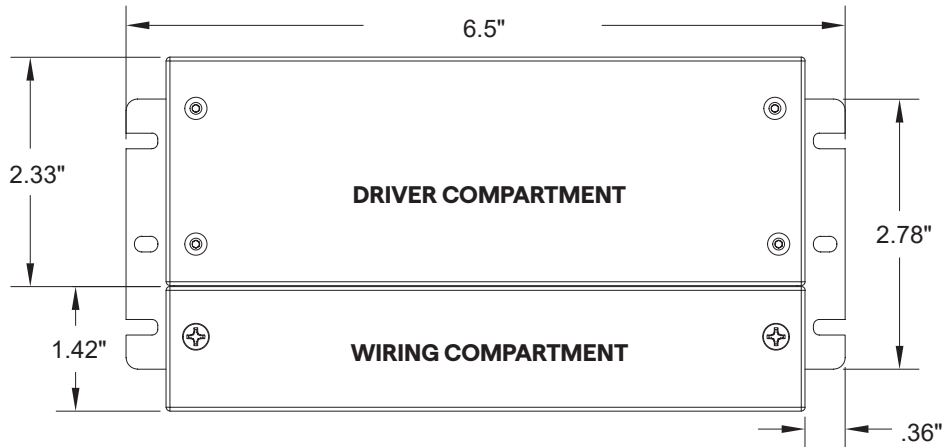

WIRING COMPARTMENT VIEW

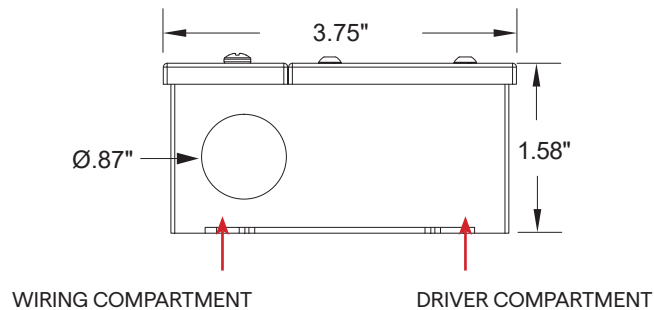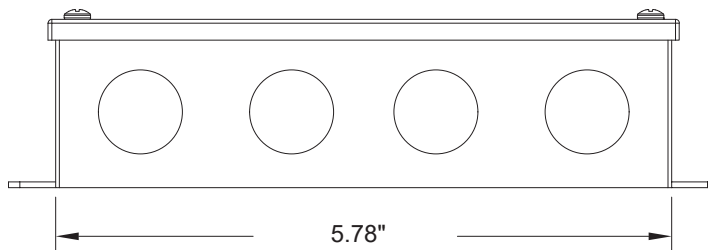




QZ-PH/0-10V



Installation Instructions

QZ 60W

TOP VIEW

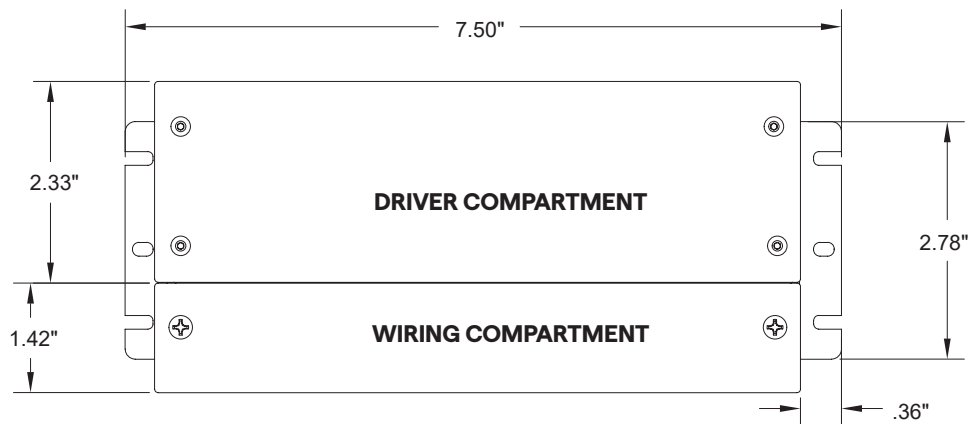

WIRING COMPARTMENT VIEW

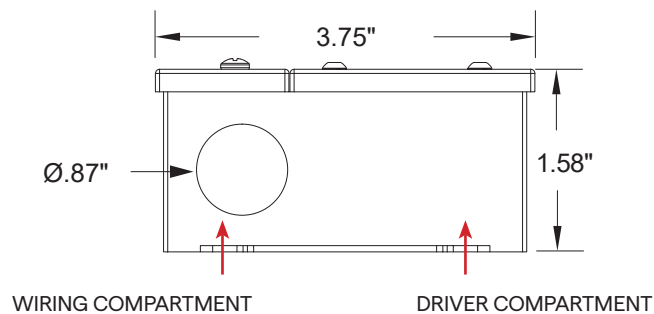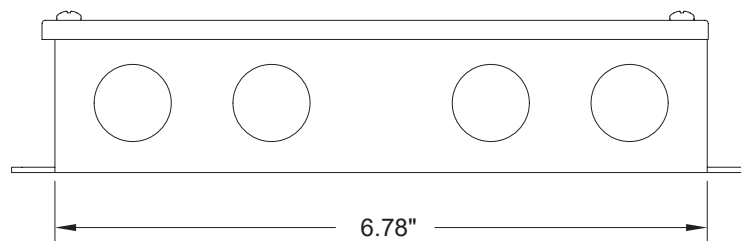




QZ-PH/0-10V



Installation Instructions

QZ 96W

TOP VIEW

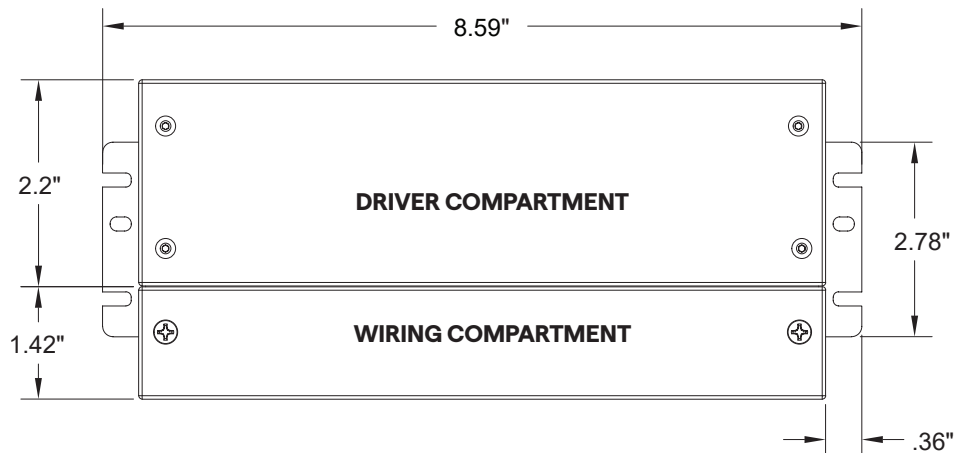

WIRING COMPARTMENT VIEW

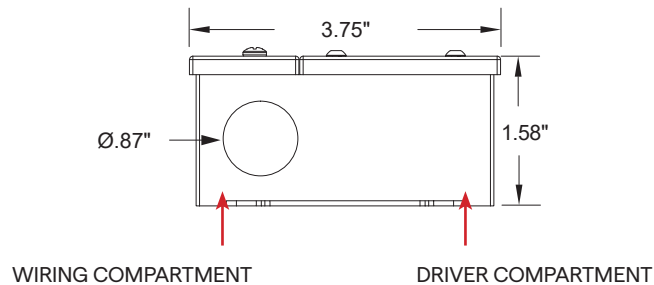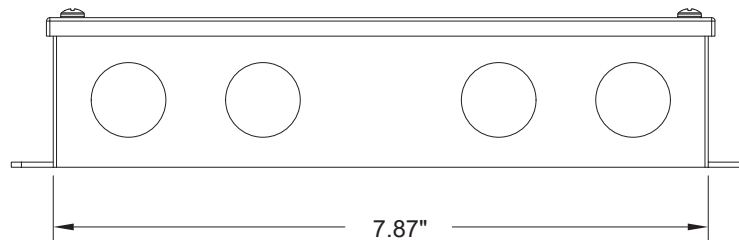




QZ-PH/0-10V



Installation Instructions

QZ 192W

TOP VIEW

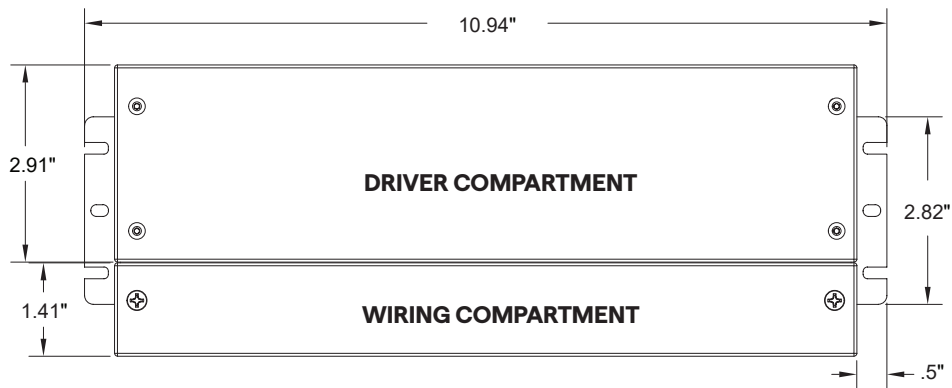

WIRING COMPARTMENT VIEW

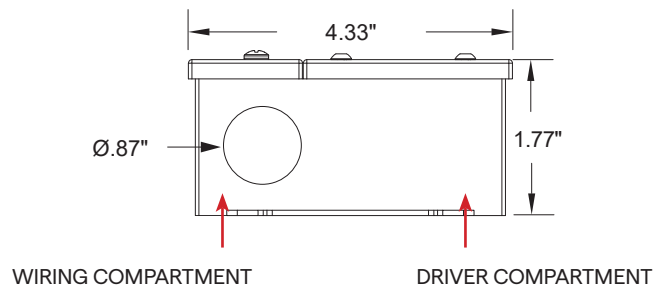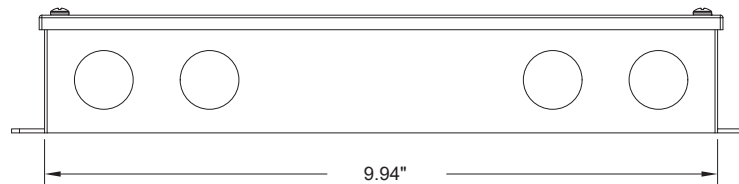




QZ-PH/0-10V

Installation Instructions

QZ 288W

TOP VIEW

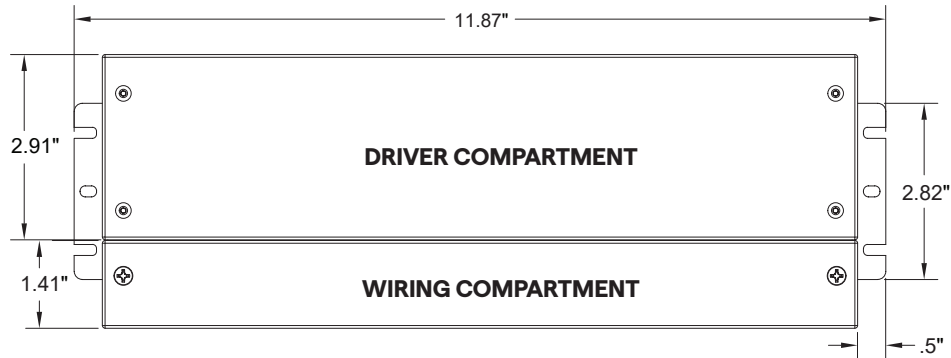

WIRING COMPARTMENT VIEW

