

General Information

Open the pack list on the crate's exterior. Locate the shop drawings and installation instruction inside the box. Review contents and make sure all parts are present. Note: adhesive is supplied by others. Recommended brand is 3M #525. For a rectangular installation, the pack list will include the number of modules and frame pieces. For odd-shaped installations, a drawing will be supplied identifying the module layout in numbered sequence.

If you discover that material is missing or defective, contact our customer service department immediately:
800.233.8493

Prior to Final Installation

- Dry fit all materials to ensure proper panel spacing and overall fit.
- Refer to the shop drawings for any required special/custom details or modifications.

Tools Required

You will need a shop vacuum, PPE (gloves, glasses, ear protection, etc.), caulk gun and a flathead screwdriver.


Installation Instructions



1 Place the pre-mitered tapered aluminum frame at the correct floor location.



2 Prepare the flooring surface to allow the tape to properly bond to the floor.

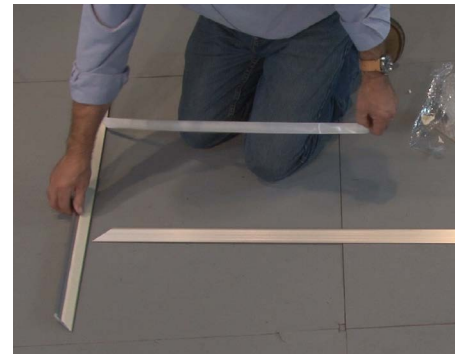

3 Remove the backing from the double-sided tape.



4 Apply the frame to the substrate.



5 Make sure the frame is square and the miters butt properly.



6 Firmly press down on the entire length of the frame to activate the tape.

Installation Instructions (continued)



7 Substrate must be clean and free of debris for the adhesive* to bond properly.

*Adhesive supplied by others. Recommended brand: 3M #525



8 Dry fit all modules inside of the frame as shown on the supplied layout/shop drawings.



9 Make alignment adjustments.



10 To prepare for adhesive, turn the module right side up to access the module's underside.



11 Apply a liberal amount of adhesive on each mounting support. Repeat for each module.



12 Apply uniform pressure to the adhesive. Allow 24 hours for adhesive to dry before removing panels.



13 If the building is still under construction, cover the system with plywood sheathing.



14 Care & Maintenance: Use a vacuum to clean debris from the surface of the unit. A hot water extraction machine can also be used to remove more difficult, lodged debris.



15 To remove module for cleaning, insert the lift key tool into the drain slot and lift.

Installation Instructions (continued)



16 Inspect for damage and replace module after cleaning.



17 Apply uniform pressure to engage the dual lock.