

HR-6CRBN-AU HANDRAIL WITH STANDARD AUSTRALIA OFFSET


PLEASE READ

PLEASE READ THESE INSTRUCTIONS THOROUGHLY PRIOR TO BEGINNING THE HR-6CRBN-AU HANDRAIL INSTALLATION!

THIS INSTRUCTION SHEET IS INTENDED TO PROVIDE A SPECIFIC GUIDE TO FOLLOW FOR THE INSTALLATION OF THIS HR-6CRBN-AU HANDRAIL. CONTAINED WITHIN IS THE TECHNICAL INFORMATION AND INSTALLATION TECHNIQUES REQUIRED TO COMPLETE AN EFFICIENT, NEAT AND LONG-LASTING INSTALLATION.

INSPECT ALL MATERIALS FOR DAMAGE OR MISSING PARTS. IF YOU DISCOVER DAMAGED OR MISSING MATERIALS, PLEASE NOTIFY THE CUSTOMER SERVICE AT 1300 272 602.

HR-6CRBN-AU HANDRAIL MUST BE INSTALLED IN ACCORDANCE WITH THESE INSTRUCTIONS! FAILURE TO FOLLOW THESE INSTRUCTIONS MAY VOID ANY PRODUCT WARRANTIES AND RESULT IN AN UNSUCCESSFUL INSTALLATION. FOR SPECIFIC QUESTIONS REGARDING THE INSTALLATION OF THIS HR-6CRBN-AU HANDRAIL PLEASE CALL 1300 272 602 OR E-MAIL SALES@C-SGROUP.COM.AU.

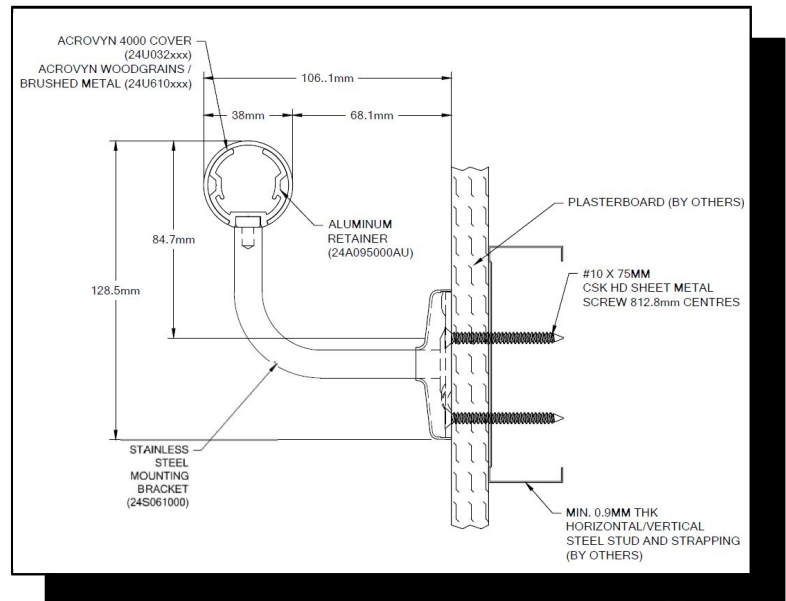

THE ACROVYN COMPONENT/S IN THIS PRODUCT MEET THE NCC 2022 (Amdt 2) PART C2D11 DEEMED-TO-SATISFY (DTS) PROVISIONS.

HANDRAILS INSTALLATION AS PER AS1428.1: 2021 IMPORTANT NOTES

1. HANDRAILS TO BE INSTALLED AT THE HEIGHT OF 865MM TO 1000MM.
2. HANDRAIL TERMINATION SEQUENCE TO BE IN ACCORDANCE WITH AS1428.1: 2021
3. HANDRAILS ARE TO HAVE NO OBSTRUCTION <600MM ABOVE HANDRAIL.
4. STAIRWAY HANDRAILS TO BE INSTALLED ON BOTH SIDES OF THE STAIRS.
5. STAIRWAY HANDRAILS ARE TO DEMONSTRATE 1 TREAD WIDTH EXTENSION FROM NOSING.
6. HANDRAILS TO BE PROVIDED WITH 300MM FLAT EXTENSION PRIOR TO HANDRAIL TERMINATION.

THE ACROVYN COMPONENT(S) IN THIS PRODUCT MEET THE NCC 2022 (Amdt 2) PART C2D11 DEEMED-TO-SATISFY (DTS) PROVISIONS.

HR-6CRBN-AU HANDRAIL

WITH STANDARD AUSTRALIA OFFSET

IMPORTANT NOTES

1. ALL LINEAL MATERIAL TO BE SUPPLIED IN STOCK LENGTHS. ALUMINUM AND ACROVYN IN LENGTHS UP TO 6100mm. THIS MATERIAL IS TO BE FIELD CUT USING QUALITY EQUIPMENT TO ENSURE THAT ALL CUTS ARE SQUARE. WHEN CUTTING MATERIAL SECTIONS, CS RECOMMENDS USING AN 80-100 TOOTH CARBIDE TIPPED SAW BLADE OR EQUIVALENT, TO MINIMIZE CHIPPING AND MAINTAIN JOINT ALIGNMENT.
2. RADIAL MATERIAL MAY BE SUPPLIED FACTORY FORMED OR IN STRAIGHT LENGTHS FOR FIELD FORMING. CONSULT FACTORY FOR OPTIONS.
3. ALL DIMENSIONS ARE TYPICAL.
4. FOR DRYWALL/PLASTER WALL CONSTRUCTION, IT IS RECOMMENDED FOR FASTENERS TO BE ENGAGED INTO METAL/WOOD STUDS TO MAINTAIN MAXIMUM PULLOUT STRENGTH. IF DURING INSTALLATION YOU ENCOUNTER SPECIAL WALL CONDITIONS THAT DO NOT ALLOW FOR DIRECT ATTACHMENT TO THE STUDS, PLEASE CONSULT THE LOCAL AUTHORITY HAVING JURISDICTION.
5. INSTALL OUTSIDE CORNERS FIRST.
6. INSTALL LONGEST RUN OF HANDRAIL FIRST.
7. ALUMINUM RETAINER SPLICE SHOULD NOT EXCEED 76.2mm DISTANCE FROM A BRACKET.
8. THE DISTANCE BETWEEN AN ACROVYN SPLICE JOINT AND AN ALUMINUM RETAINER SPLICE JOINT SHOULD BE STAGGERED 50.8mm.
9. TANGENT POINTS ON FACTORY FORMED RADIAL MATERIAL WILL BE MARKED APPROXIMATELY AND SHOULD BE CUT TO SUIT FIELD CONDITIONS.
10. MATERIAL MUST REACH 18°C MIN. TO 24°C MAX. 24 HOURS PRIOR TO INSTALLATION. THIS IS ESSENTIAL TO MINIMIZE EXPANSION AND CONTRACTION OF MATERIAL.
11. THIS HANDRAIL REQUIRES A MINIMUM OF 2 MOUNTING BRACKETS PER UNIT. THE MINIMUM END CAP-TO-END CAP HANDRAIL LENGTH IS 323.9mm.
12. FOR MORE INFORMATION ON HR-6CRBN HANDRAIL SEE OUR WEBSITE AT www.c-sgroup.com.au.

HR-6CRBN-AU HANDRAIL WITH STANDARD AUSTRALIA OFFSET


COMPONENTS & WALL FASTENERS



ACROVYN HANDRAIL COVER
(24U032xxx)
ACROVYN WOODGRAIN COVER
(24U610xxx)




ALUMINUM RETAINER
(24A095000)




ALIGNMENT PLUG
(24I051000)




FASTENER #1
#6 X 16mm S/S
PHILLIPS FLAT HEAD
SMS (90H231004)

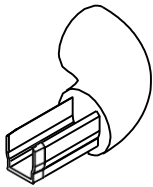


HANDRAIL ENDCAP
(24I083xxx, RH SHOWN)
(24I082xxx, LH)
WOODGRAIN END CAP
(24I634xxx, RH SHOWN)
(24I610xxx, LH)

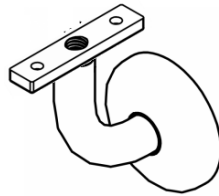

STAINLESS STEEL
MOUNTING
BRACKET
(24S061000-AU3)

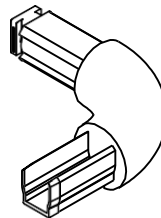

HANDRAIL OUTSIDE
CORNERASSEMBLY



FASTENER #2
#10 X 20mm S/S
PHILLIPS PANHEAD
TEK SCREW
(90H739006)


ACCEPTABLE FASTENERS FOR DIFFERENT WALL MATERIAL

WALL CONDITION	SPECIFIED FASTENER	DRILL DIAMETERS		CS PART NUMBER
		WALL	RETAINER	
WOOD STUD/GYPSUM WALL	#12 X 75mm S/S PHILLIPS BUTTON HEAD MULTI PURPOSE SCREW (STANDARD SUPPLY)	N/A	N/A	90H4210XX
STEEL STUD/GYPSUM WALL	#10 X 75mm S/S PHILLIPS FLAT HEAD SHEET METAL SCREW	3mm	N/A	90H431006
CONCRETE/CONCRETE BLOCK	1/4" X 60mm S/S HEX HEAD MASONRY + MUNGO ML PLUG 8 X 80	8mm	N/A	90H027006




HR-6CRBN-AU HANDRAIL WITH STANDARD AUSTRALIA OFFSET

LAYOUT VIEW

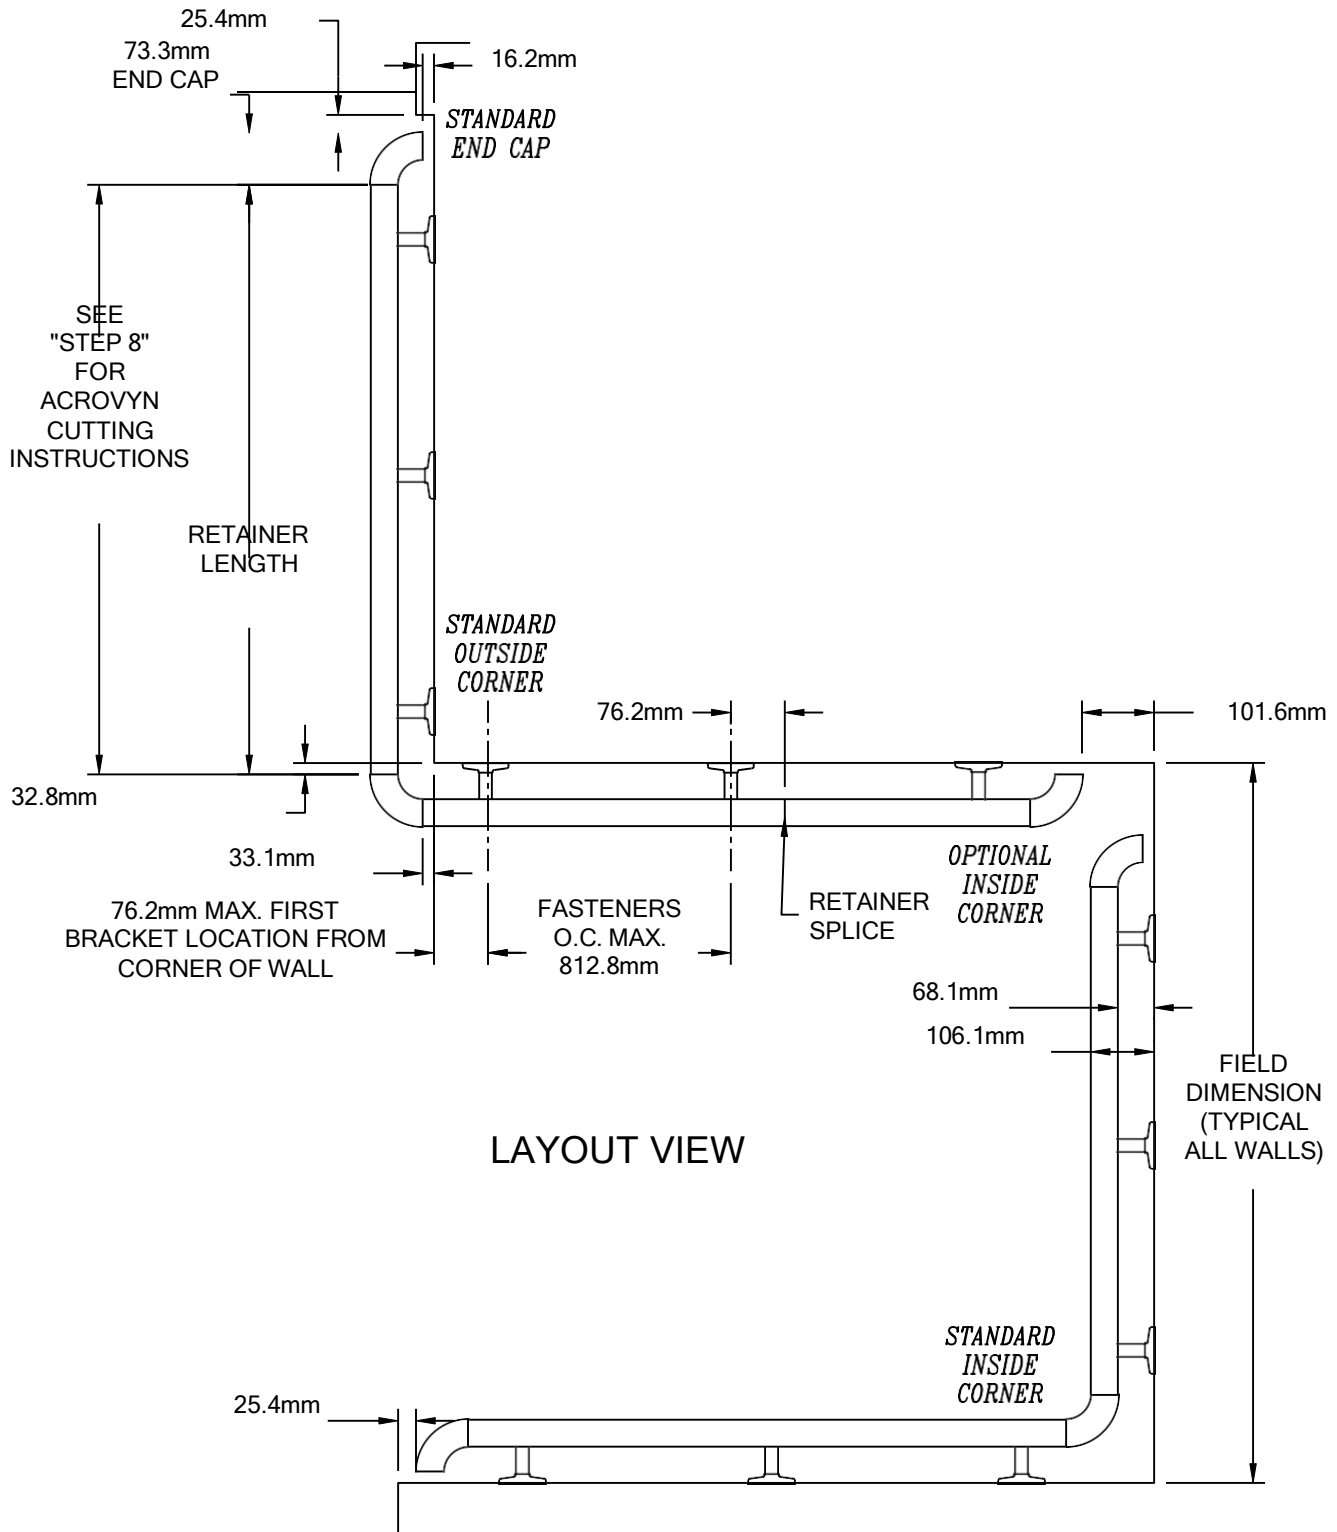

HR-6CRBN-AU HANDRAIL
WITH STANDARD AUSTRALIA OFFSET
TYPICAL ASSEMBLY

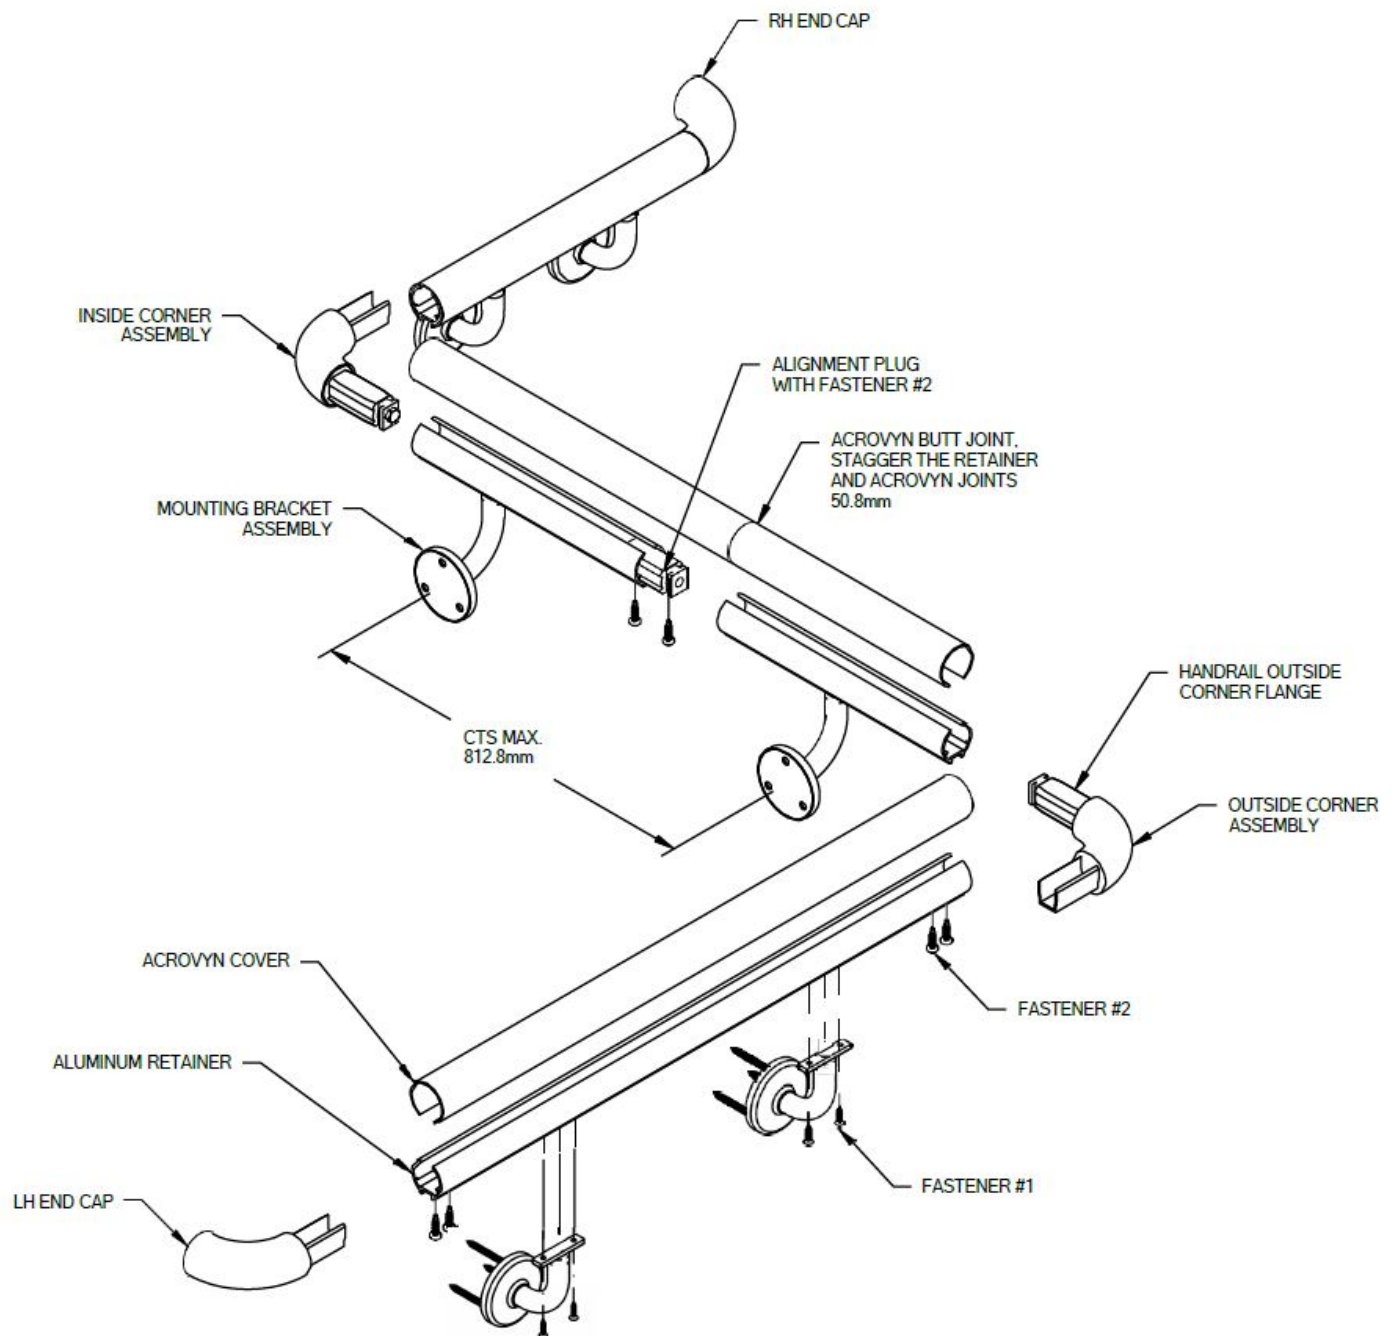

HR-6CRBN-AU HANDRAIL WITH STANDARD AUSTRALIA OFFSET

TYPICAL ASSEMBLY

NOTE: INSTALLATION OF LINEAL OR RADIAL HR-6CRBN HANDRAIL SHOULD BE DONE IN ACCORDANCE WITH THE FOLLOWING INSTRUCTIONS.

1. USING "LOCAL CODE" REQUIREMENTS, ESTABLISH HANDRAIL HEIGHT ABOVE FINISH FLOOR. DEDUCT 84.7mm AND SNAP A CHALK LINE AT THAT HEIGHT. THIS MARKS THE LOCATION OF THE HOLE FOR THE MOUNTING BRACKET FASTENERS.
2. DRILL CLEARANCE HOLES IN WALL SURFACE FOR MOUNTING HARDWARE. REFERENCE CHART ON PAGE 2 FOR CORRECT DRILL DIAMETERS.

NOTE: SEE LAYOUT VIEW TO AID IN MOUNTING BRACKET LOCATION.

3. CUT THE CONTINUOUS ALUMINUM RETAINER TO LENGTH USING THE REQUIRED DEDUCTIONS (SEE LAYOUT VIEW).

NOTE: IT IS RECOMMENDED THAT THE ACROVYN COVER AND ALUMINUM RETAINER BE CUT WITH AN 80-100 TOOTH CARBIDE TIPPED SAW BLADE OR EQUIVALENT.

4. ATTACH END CAPS AND INSIDE/OUTSIDE CORNERS:
 - INSERT THE END CAP INTO THE RETAINER.
 - DRILL 3mm DIAMETER PILOT HOLE THROUGH THE BOTTOM OF THE RETAINER AND END CAP 20mm AND 40mm FROM THE END OF THE RETAINER.
 - REMOVE END CAP AND DRILL 13/64" CLEARANCE HOLE FOR #10 X 20mm PHILLIPS PANHEAD TEK SCREW.
 - ATTACH END CAP TO RETAINER WITH THE ABOVE MENTIONED SCREW, UP THROUGH THE BOTTOM OF THE RETAINER.

NOTE: TO AID IN LOCATING THE END CAPS CORRECTLY, CUT A 101.6mm SECTION OF COVER FROM SCRAP AND SNAP IT ON THE RETAINER. LOCATE THE CAP SO IT ALIGNS FLUSH WITH THE TOP AND BOTTOM OF THE COVER.

5. DRILL 3/8" PILOT HOLES IN THE ALUMINUM RETAINER FOR MOUNTING BRACKET ATTACHMENT. MOUNTING BRACKETS ARE TO BE LOCATED 76.2mm FROM THE END OF THE RETAINER AND 812.8mm ON CENTER ALONG LENGTH, AS REQUIRED.
6. USING THE ASSEMBLED BRACKET AS A TEMPLATE, DRILL 3mm PILOT HOLES INTO THE RETAINER FOR MOUNTING BRACKET ATTACHMENT.
7. FASTEN THE ALUMINUM RETAINER TO THE WALL BRACKETS IN SUCCESSION BY INSERTING TWO (2) #6 X 16mm S/S PHILLIPS FLAT HEAD SHEET METAL SCREWS THROUGH THE UNDERSIDE OF BRACKET INTO THE RETAINER. CAUTION: OVER-TORQUEING MAY CAUSE THE FASTENERS TO STRIP.

NOTE: WHEN FIELD FORMING RADIUS HANDRAIL, BE SURE TO APPLY NEEDED PRESSURE FROM BRACKET TO BRACKET.

8. INSTALL HANDRAIL ASSEMBLY USING THE APPROPRIATE FASTENERS. USE A LEVEL TO ENSURE THAT THE HANDRAIL IS LEVEL.
9. CUT THE ACROVYN COVER TO THE PROPER LENGTH. THE COVER LENGTH IS DETERMINED BY MEASURING THE DISTANCE BETWEEN THE INSTALLED END CAPS AND/OR INSIDE/OUTSIDE CORNER ASSEMBLIES.

NOTE: IT IS RECOMMENDED THAT THE ACROVYN COVER BE CUT SLIGHTLY LONGER (0.8mm UP TO 1.5m, 1.6mm OVER 1.5m) THAN THE MEASURED DISTANCE. THIS ADDITIONAL LENGTH WILL PROVIDE FOR A TIGHTER COVER-TO-END CAP FIT.

10. STARTING AT ONE END, SNAP THE ACROVYN COVER ONTO THE RETAINER ALONG THE LENGTH OF THE HANDRAIL.

NOTE: MANUFACTURER RECOMMENDS ALL PRINTED "PRODUCT IDENTIFICATION" ON THE REAR OF THE ACROVYN PROFILE SHALL BE ORIENTED IN THE SAME DIRECTION DURING INSTALLATION TO ENSURE PROPER ALIGNMENT AT SPLICE BUTT JOINTS.



Unit 6, 26-32 Cosgrove Rd, Enfield NSW 2136 Australia

• sales@c-sgroup.com.au • 1300 272 602 • F: 1300 247 407 • www.c-sgroup.com.au

This document is the property of Construction Specialties, Inc. and contains CONFIDENTIAL PROPRIETARY INFORMATION that is not to be disclosed to third parties and is not to be used without approval in writing from Construction Specialties, Inc.