

### General Information

Open the pack list on the crate's exterior. Locate the shop drawings and installation instruction inside the box. Review contents and make sure all parts are present. For a rectangular installation, the pack list will include the number of modules and frame pieces. For odd-shaped installations, a drawing will be supplied identifying the module layout in numbered sequence.

If you discover that material is missing or defective, contact our customer service department immediately: **800.233.8493**

### Important Notes - Do Not Overlook

Prior to installation, ensure that the material is stored indoors and has acclimated to the environment's temperature for 24 hours.

Assess the site condition prior to installation ensuring the area is:

- Free of debris and moisture
- Smooth and flat

High spots should be ground down. Low spots should be filled with a self-leveling grout. If these conditions have been met, you can begin the installation.


### Tools Required

You will need a level, rubber mallet, tape measure, utility knife, shop vacuum and PPE (gloves, glasses, ear protection, etc.).


### Installation Instructions



**1** Start by dry fitting all frame pieces within the area and use a tape measure to ensure a proper fit. For odd-shaped layouts, match frame tags to the drawing on the pack list.

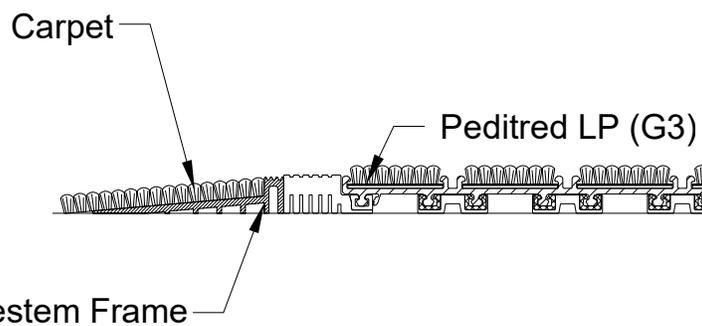

**2** The leg of the frame should face away from the Peditred LP and go underneath the surrounding carpet.

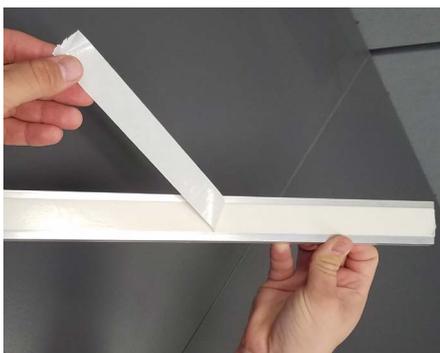

**3** Remove the covering on the tape and reinstall the frame in its correct position and location. Apply pressure on the frame to properly bind the tape to the flooring.


To view details, specs and product info visit [www.c-sgroup.com/efs](http://www.c-sgroup.com/efs).

For technical and design assistance call 800.233.8493

## Installation Instructions (continued)



**4** Place PediTred LP modules in proper place as shown on the shop drawings.

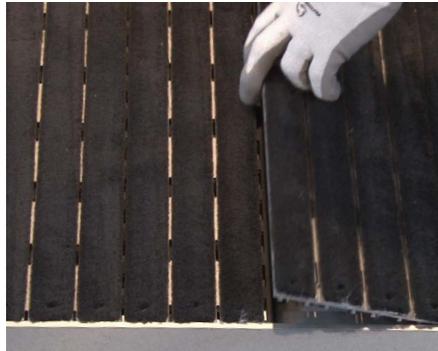


**5** Join modules together by placing the aluminum male foot into the adjacent module's female connector.



**6** Use a rubber mallet to join the foot into the connector.



**7** Continue to install the remaining modules into the framed recess.

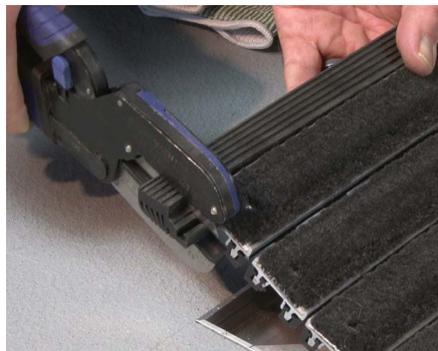

**8** The end trim is shipped oversized to allow for contraction. Cut the end trim flush to the adjacent rail using a utility knife.



**9** For proper fit, the end trim can be cut in any of the grooves that are spaced 1/8" apart using a sharp utility knife. Score several times to cut



**10** Make final adjustments for rail alignment.



**11** Care & Maintenance: Clean the unit with a vacuum.



**12** If construction is to continue in the building, protect the unit with plywood sheathing.

## Installation Instructions (continued)

---



**13** Care & Maintenance: to properly clean underneath the grid and avoid rail damage, roll back the grid edge to the 12th rail. Continue to roll back the grid holding that diameter.