




FLAT ROOF TO FLUSH WALL TRANSITION AT ROOF EDGE

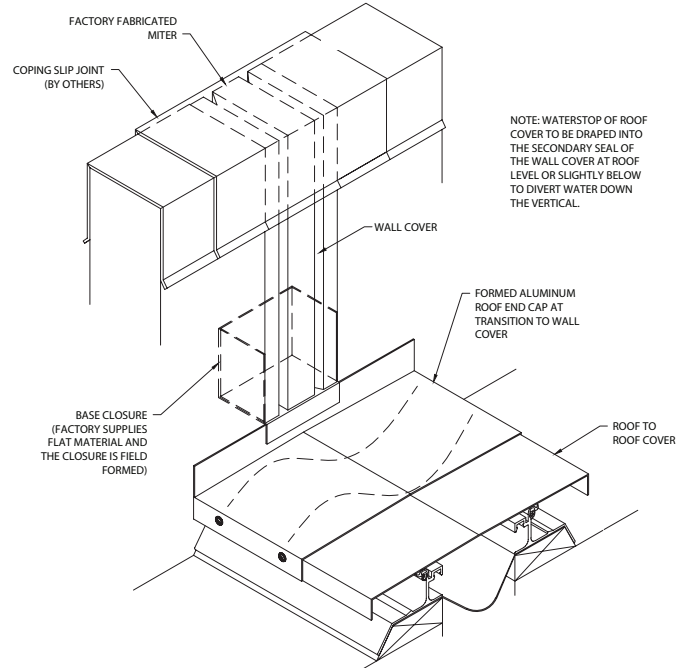


FLAT ROOF TO FLUSH WALL TRANSITION AT PARAPET

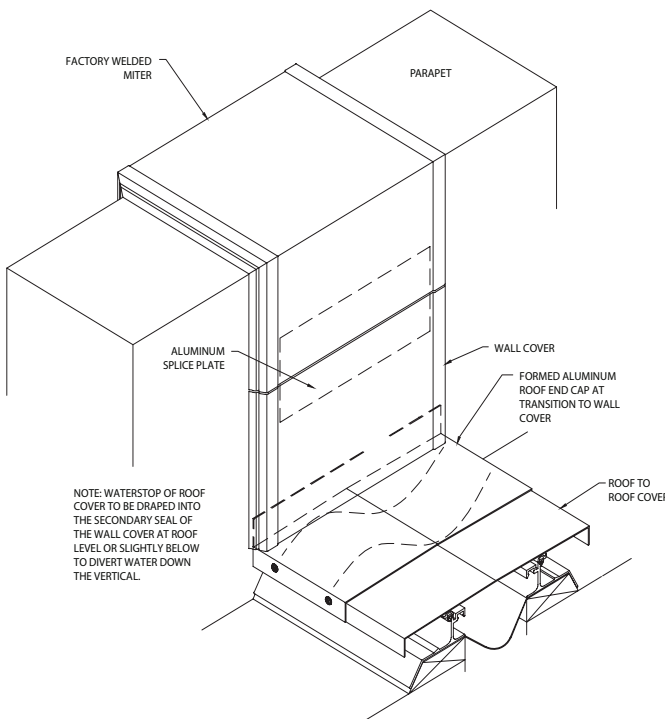


FLAT ROOF TO FLAT WALL TRANSITION AT PARAPET

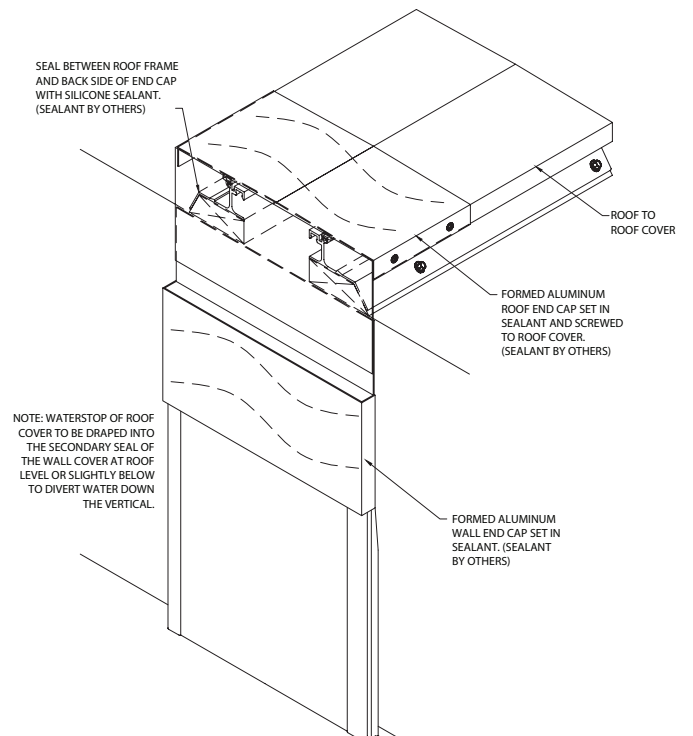


FLAT ROOF TO FLAT WALL TRANSITION AT ROOF EDGE

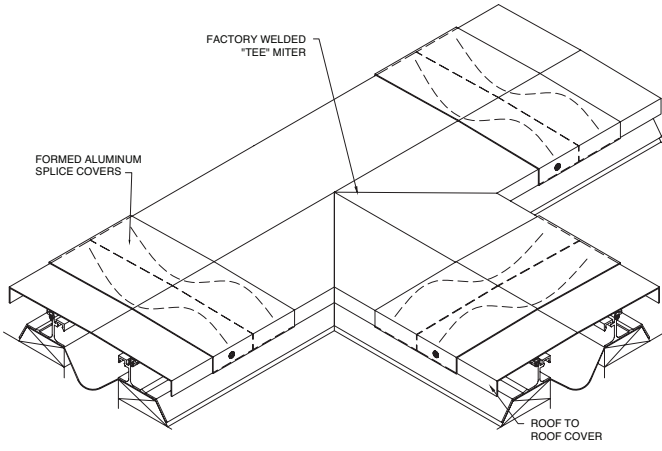


FLAT ROOF TEE MITER

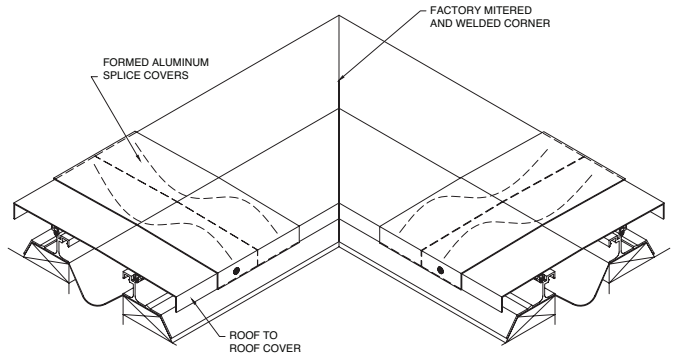


FLAT ROOF 90° MITER

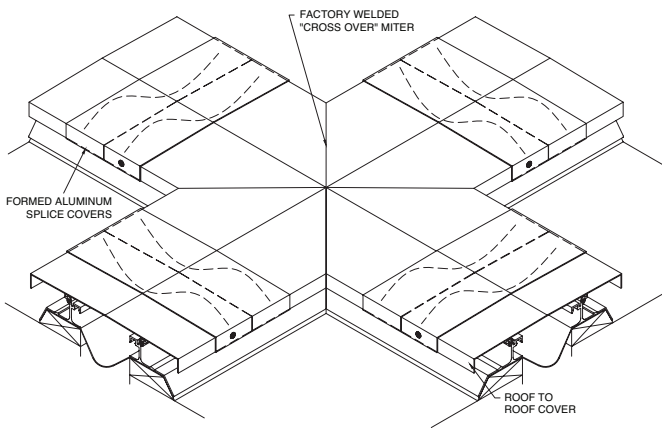


FLAT ROOF CROSS OVER MITER

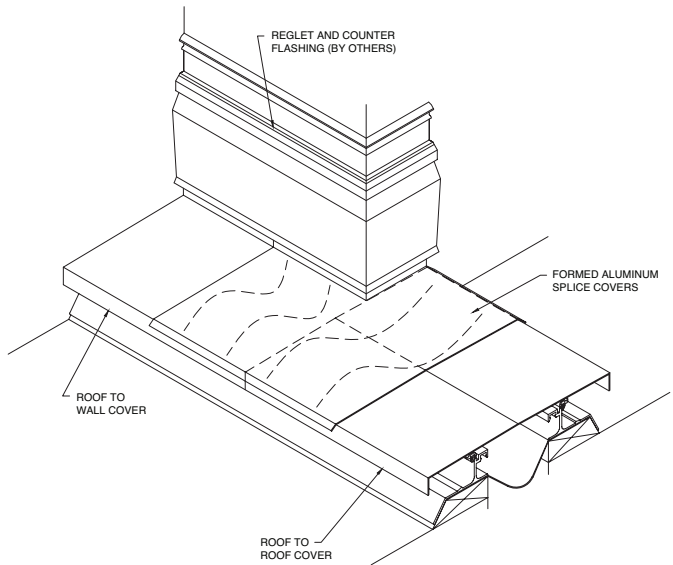


FLAT ROOF TO ROOF TO WALL TRANSITION

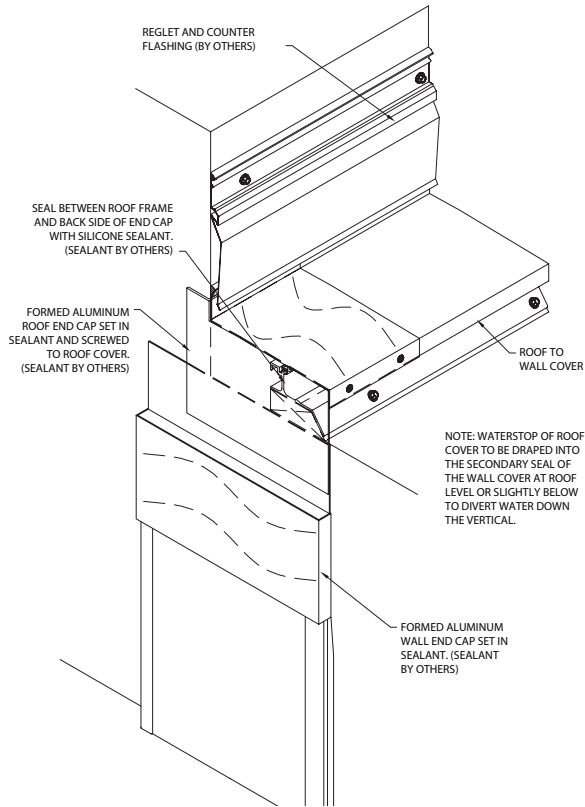


ROOF TO WALL TO FLAT WALL TRANSITION AT THE ROOF EDGE

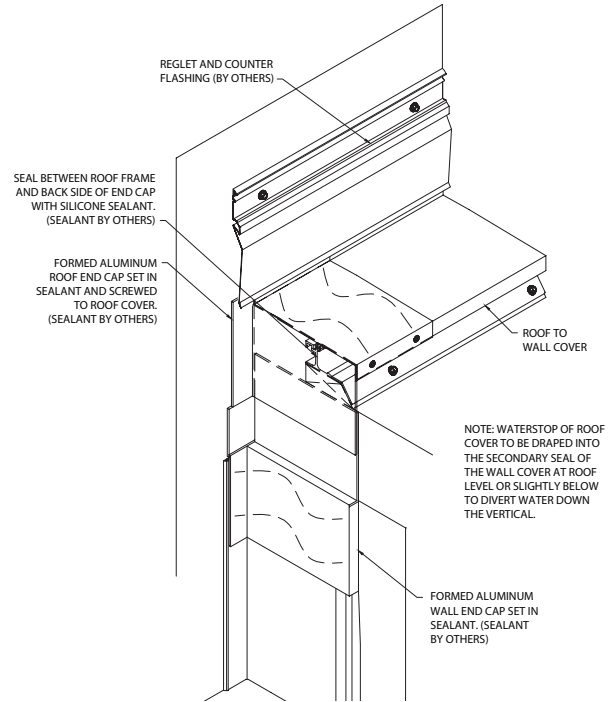

ROOF TO WALL TO CORNER WALL TRANSITION AT ROOF EDGE

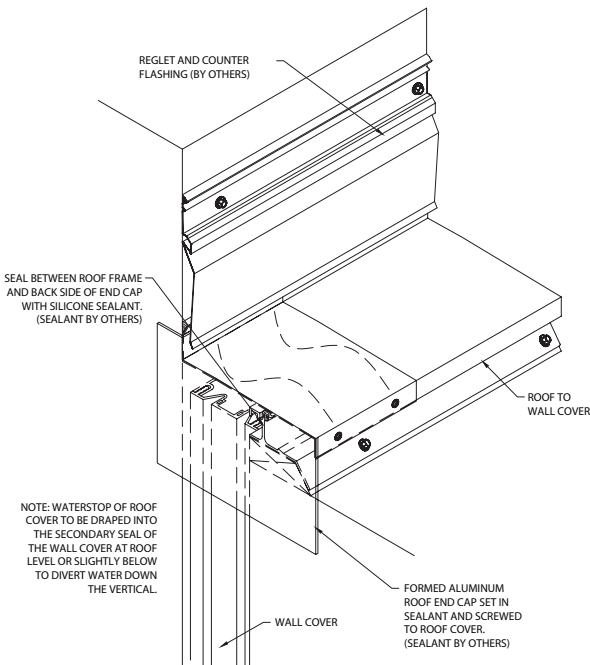


ROOF TO WALL TO FLUSH WALL TRANSITION AT ROOF EDGE

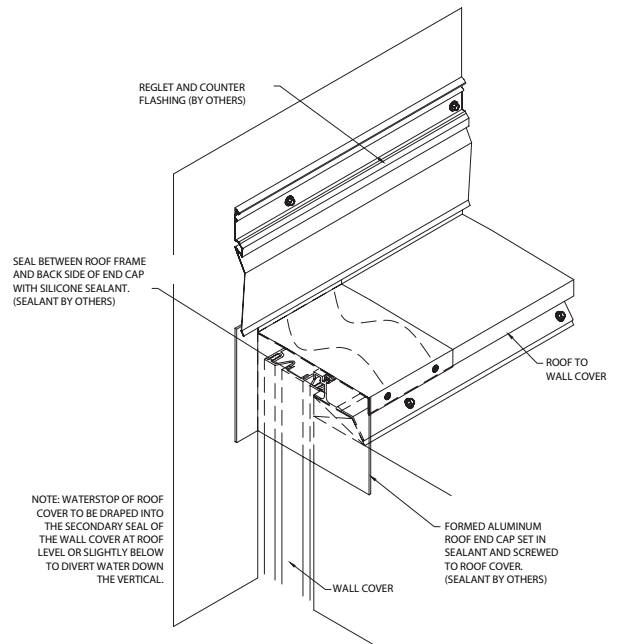


ROOF TO WALL TO FLUSH CORNER WALL TRANSITION AT THE ROOF EDGE


To download detail, specs & photos visit www.c-sgroup.com
 For technical and design assistance call 800-233-8493.

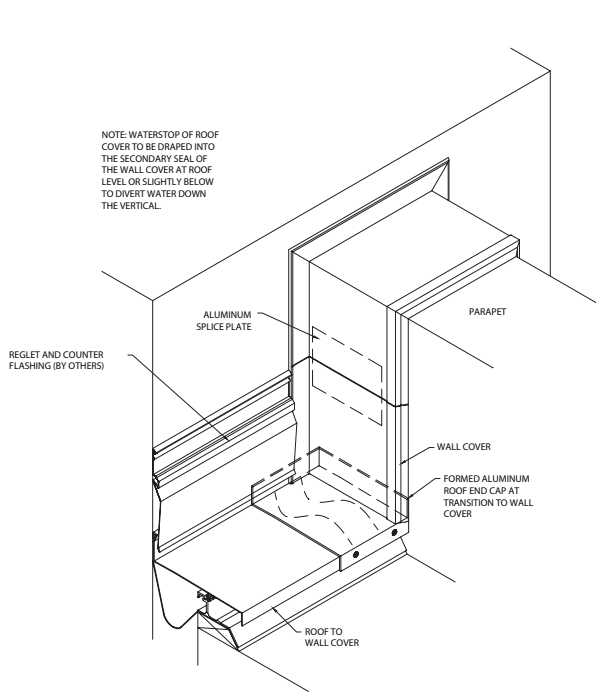


ROOF TO WALL TO CORNER WALL TRANSITION AT PARAPET

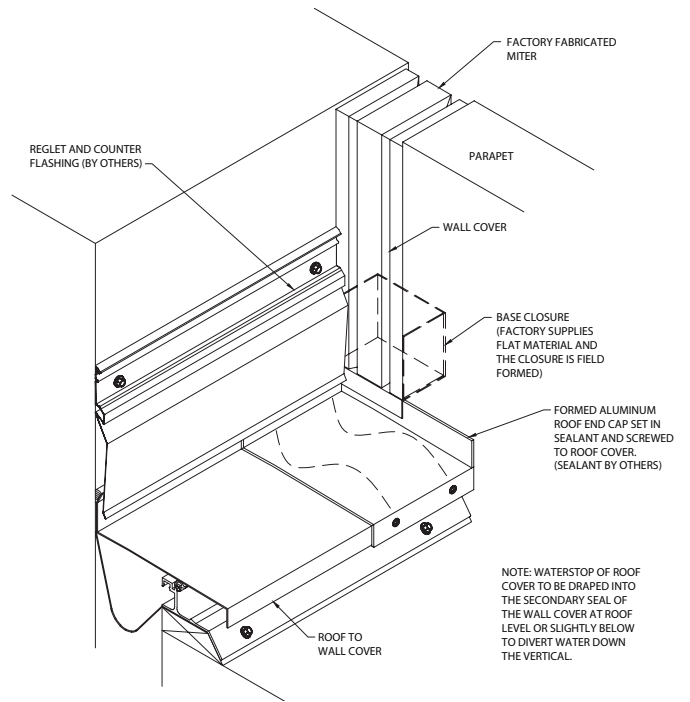

ROOF TO WALL TO FLUSH WALL TRANSITION AT PARAPET

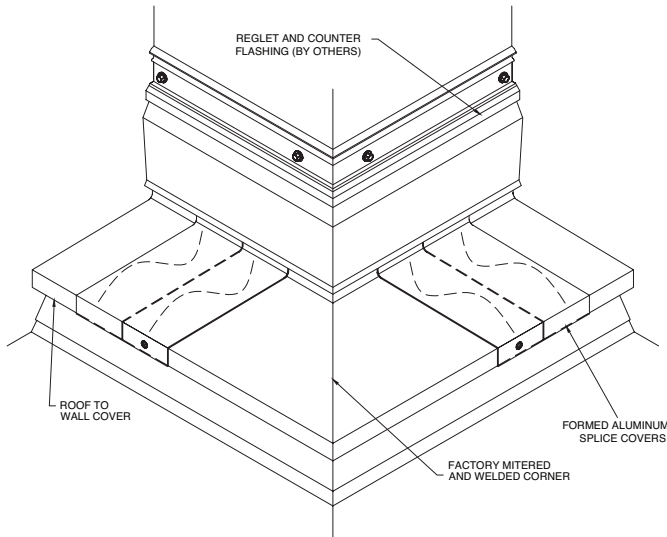

ROOF TO WALL 90° OUTSIDE CORNER MITER

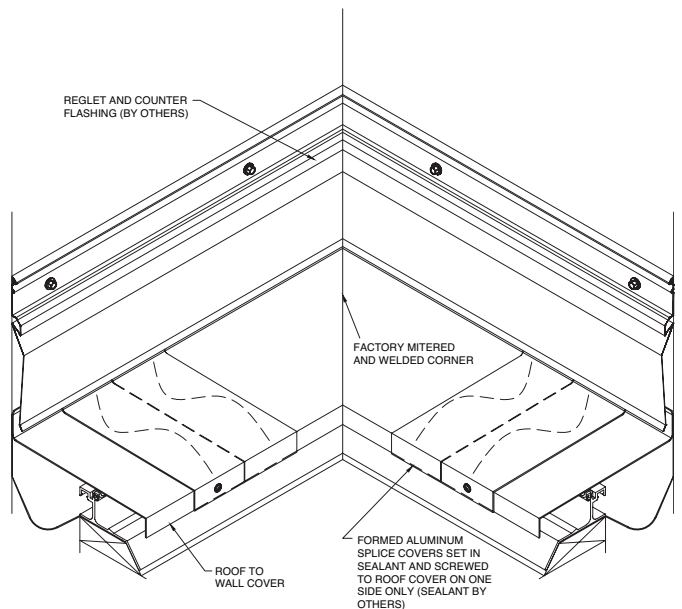

ROOF TO WALL 90° INSIDE CORNER MITER