




## Exterior Joint Transitions – Metal Transitions

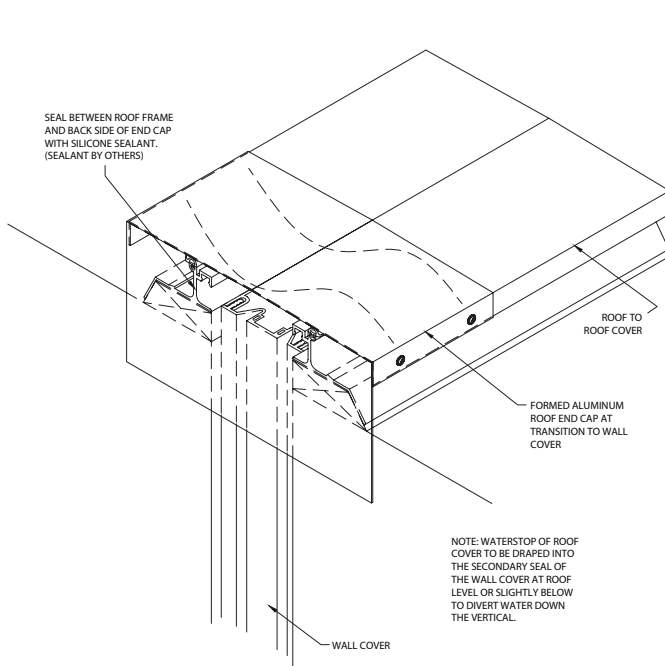


FLAT ROOF TO FLUSH WALL TRANSITION  
AT ROOF EDGE

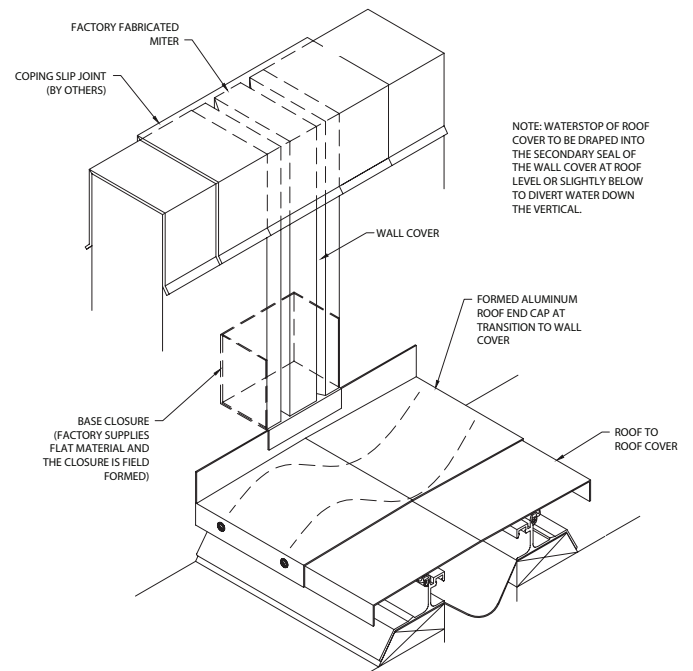

FLAT ROOF TO FLUSH WALL TRANSITION  
AT PARAPET

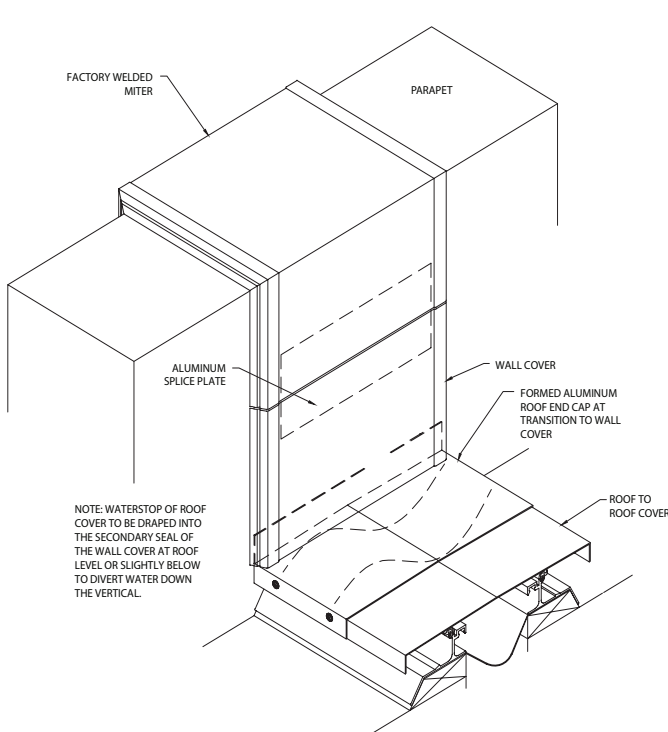


FLAT ROOF TO FLAT WALL TRANSITION  
AT PARAPET

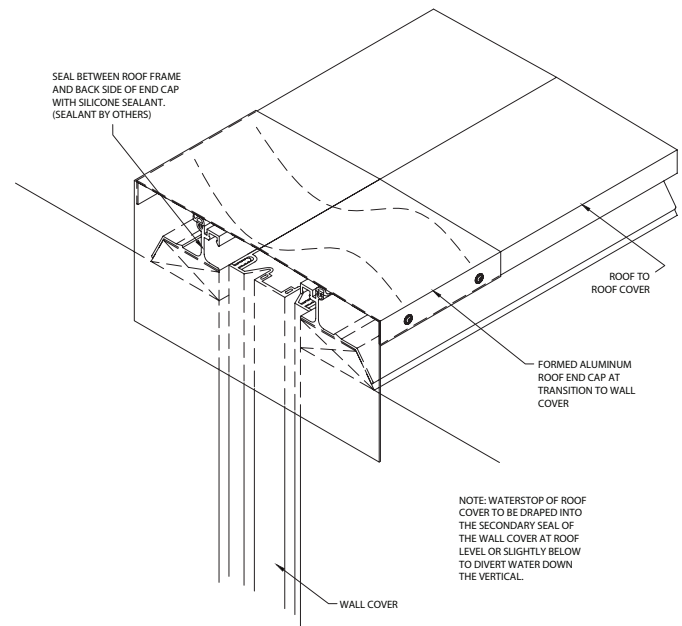


FLAT ROOF TO FLAT WALL TRANSITION  
AT ROOF EDGE


# Exterior Joint Transitions – Metal Transitions

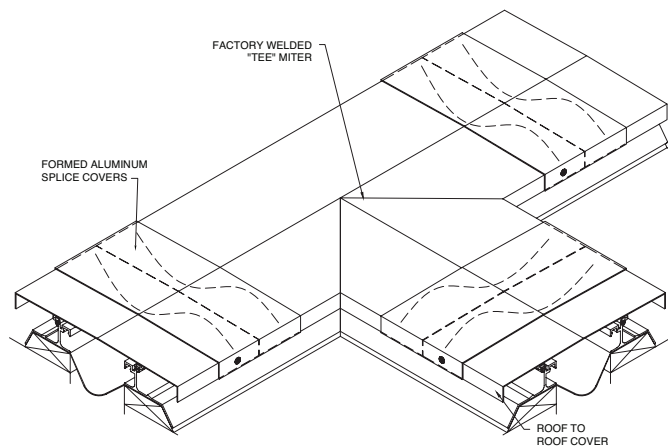


FLAT ROOF TEE MITER

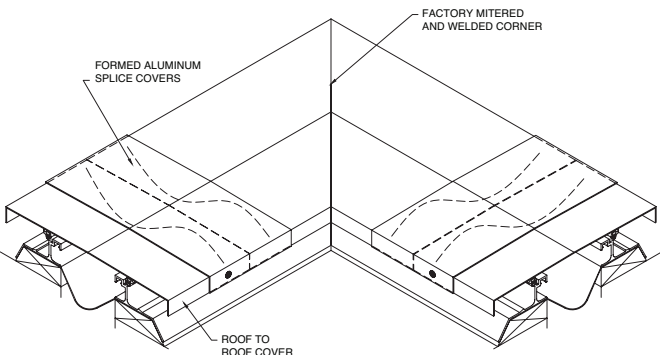

FLAT ROOF 90° MITER

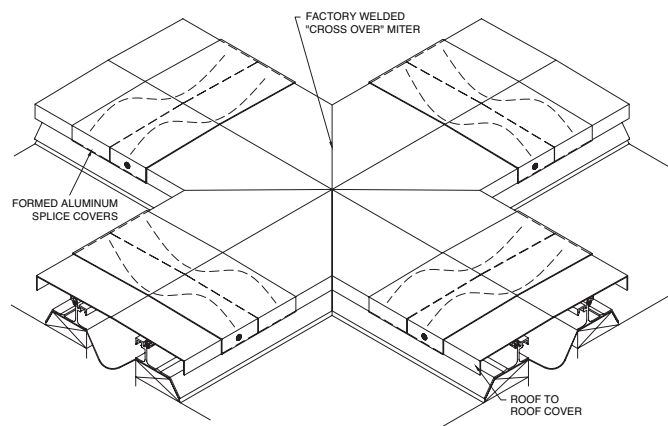


FLAT ROOF CROSS OVER MITER

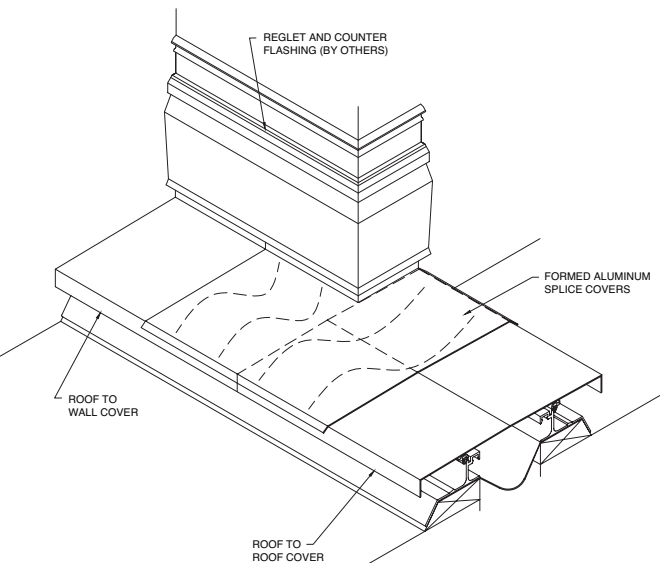


FLAT ROOF TO ROOF TO WALL TRANSITION


# Exterior Joint Transitions – Metal Transitions

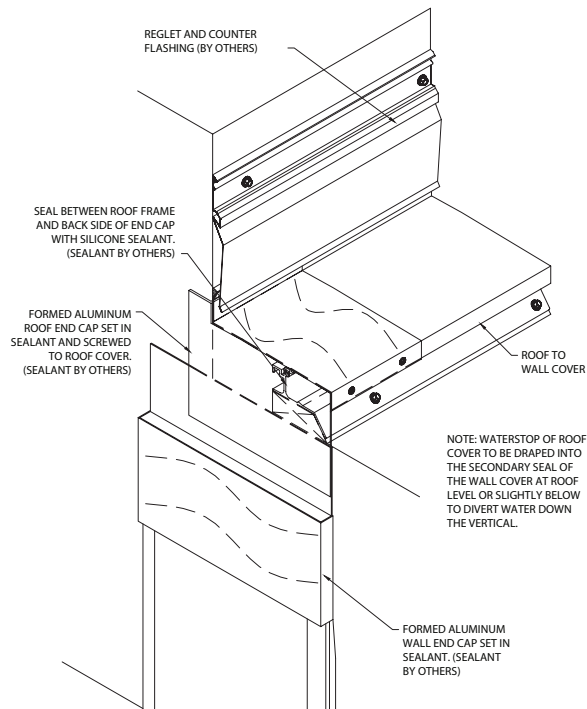


**ROOF TO WALL TO FLAT WALL TRANSITION  
AT THE ROOF EDGE**

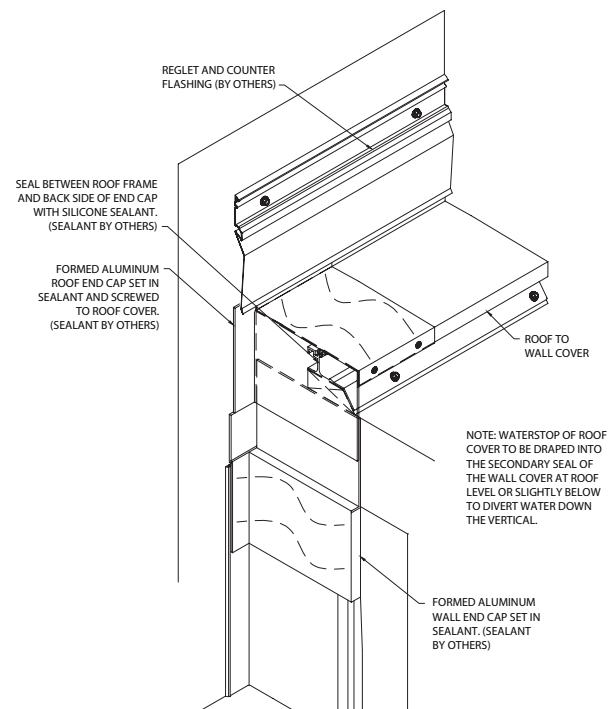

**ROOF TO WALL TO CORNER WALL TRANSITION  
AT ROOF EDGE**

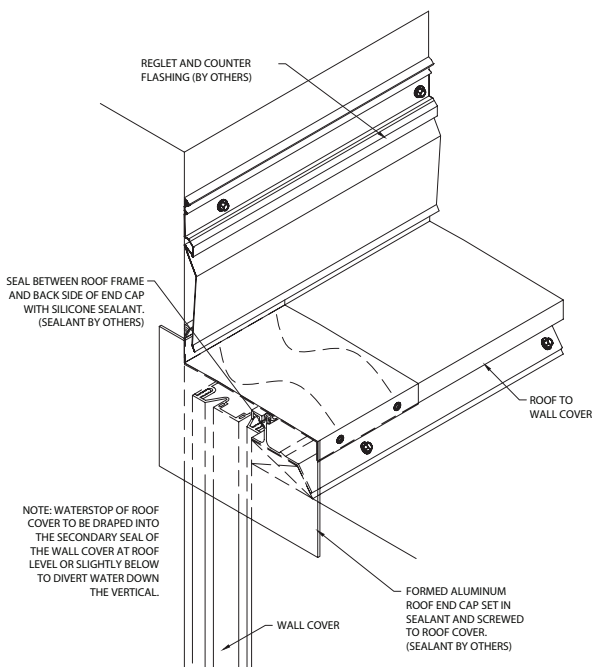


**ROOF TO WALL TO FLUSH WALL TRANSITION  
AT ROOF EDGE**

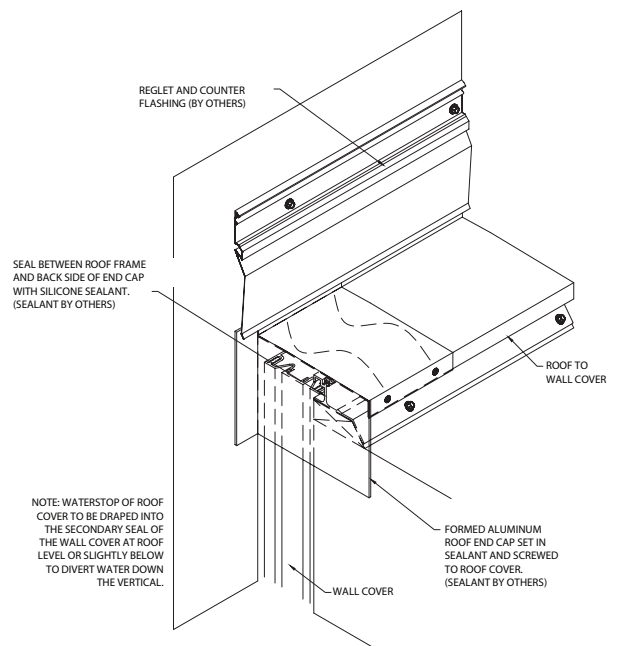


**ROOF TO WALL TO FLUSH CORNER WALL  
TRANSITION AT THE ROOF EDGE**


## Exterior Joint Transitions – Metal Transitions

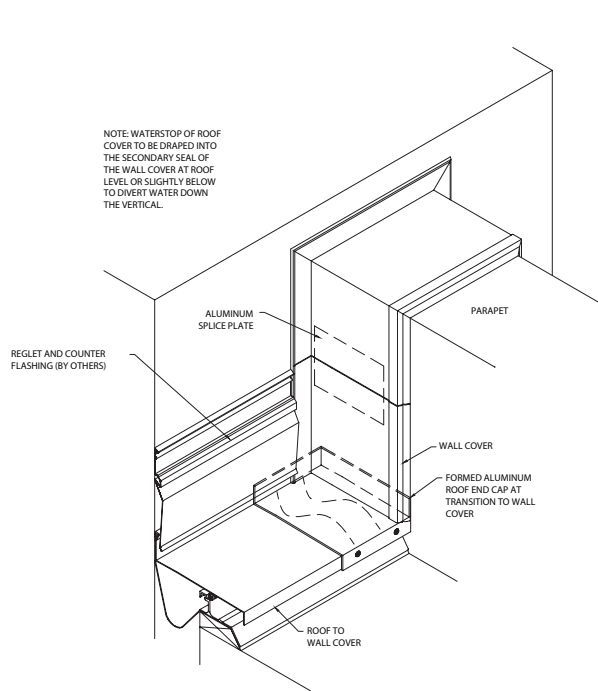


ROOF TO WALL TO CORNER WALL TRANSITION  
AT PARAPET

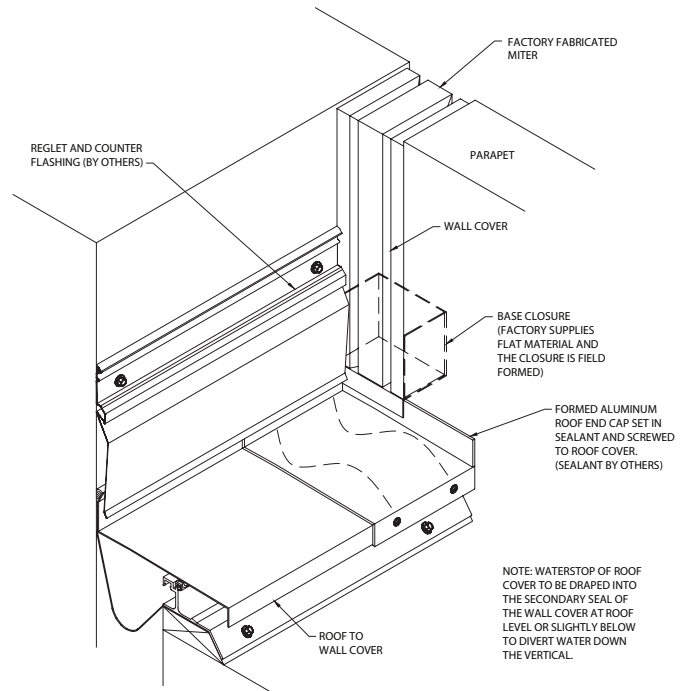

ROOF TO WALL TO FLUSH WALL TRANSITION  
AT PARAPET

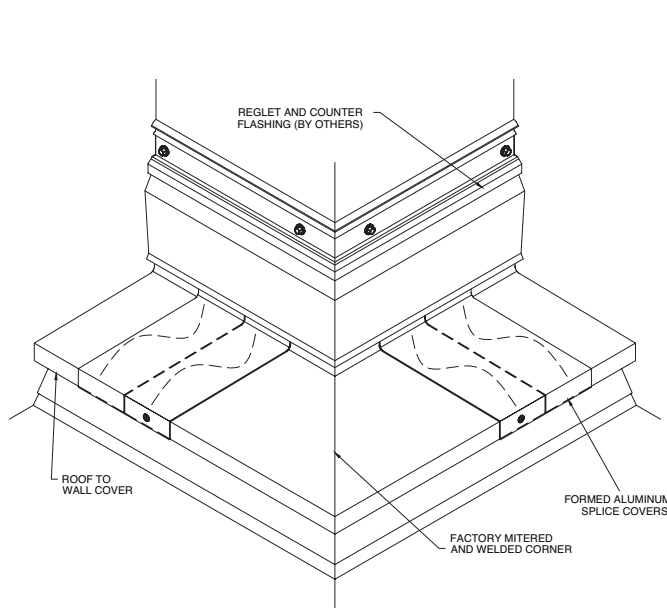

ROOF TO WALL 90° OUTSIDE CORNER MITER

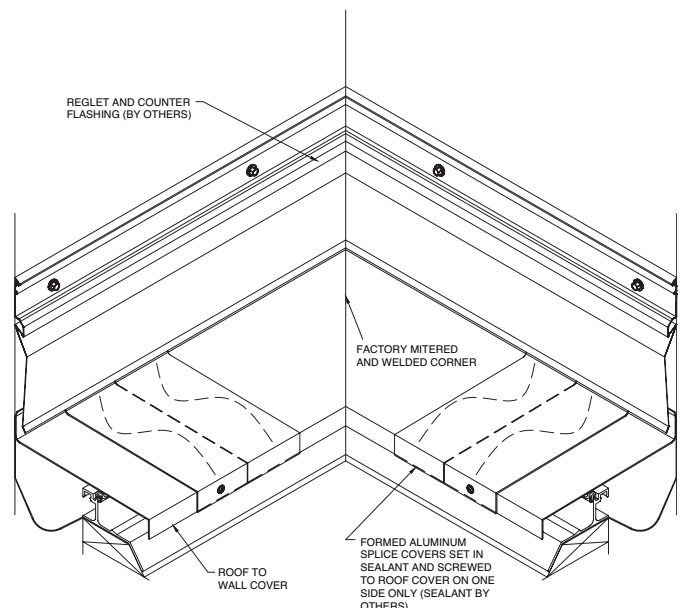

ROOF TO WALL 90° INSIDE CORNER MITER