


**COLOR MATCHED CAULKING**  
FOR .040/.060 WALL COVERING

NOTE: MATERIAL MUST REACH 65° MIN. TO 75° MAX. 24 HOURS PRIOR TO INSTALLATION.

1. APPLY THE ADHESIVE AS DESCRIBED IN THE WALL COVERING INSTALLATION INSTRUCTIONS.
2. INSTALL THE ACROVYN WALL COVERING PER THE INSTALLATION INSTRUCTIONS USING A SPACER NOT LESS THAN 1/16" THICK TO MAINTAIN AN EVEN JOINT WIDTH.
3. ALLOW THE ADHESIVE TO CURE PROPERLY
4. APPLY STRIPS OF MASKING TAPE ON EACH SIDE OF THE JOINT TO PREVENT EXCESS CAULKING FROM GETTING ON THE WALL COVERING.

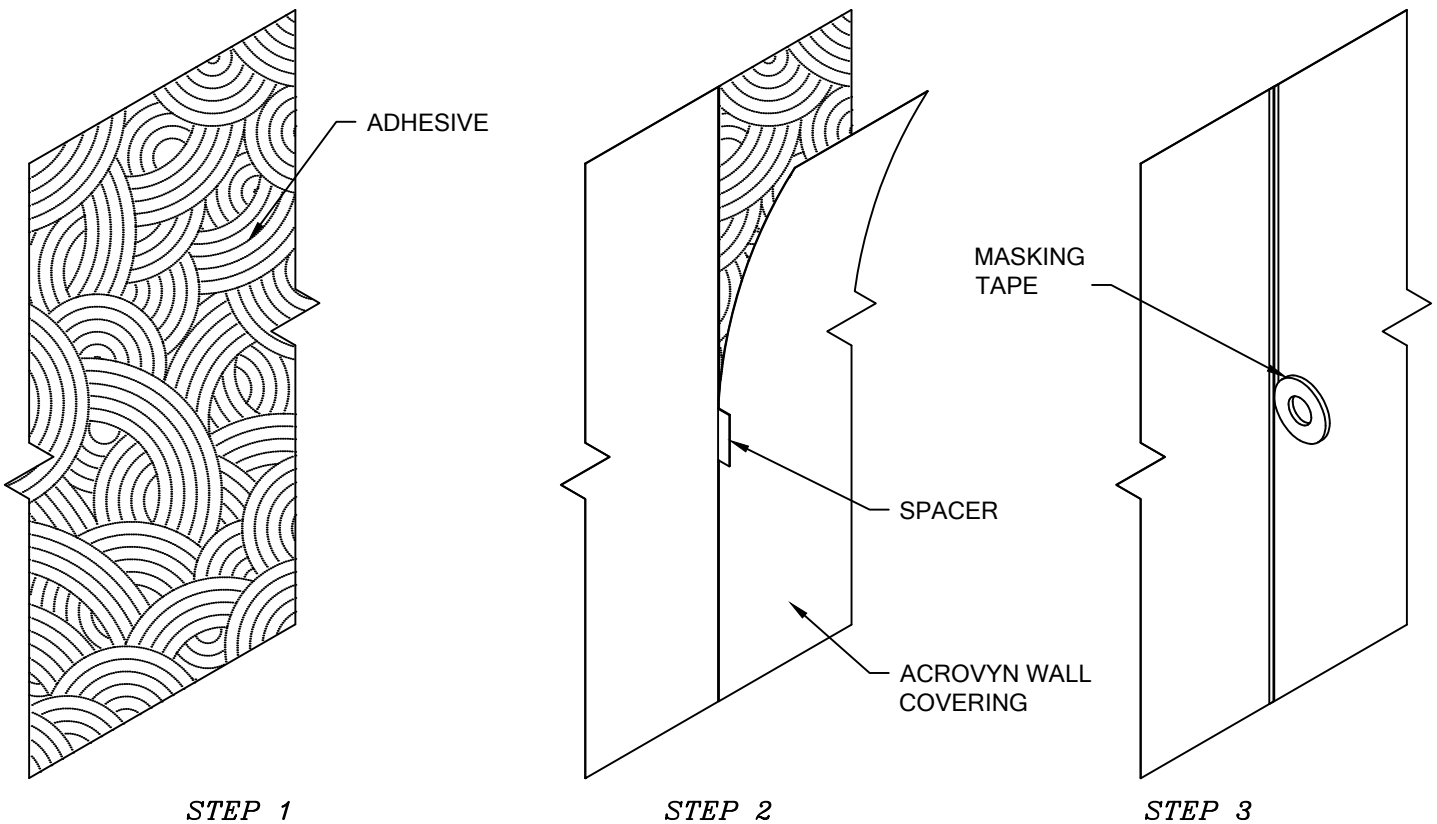


### COLOR MATCHED CAULKING

5. APPLY ONE 1/8" BEAD OF COLORFLEX II CAULK TO THE WALL COVERING JOINT. BE CERTAIN THAT A SUFFICIENT AMOUNT IS APPLIED AND THE JOINT IS FILLED WITH CAULK. COVERAGE EQUALS 90'-100' PER TUBE.
6. SCREED OFF THE EXCESS CAULKING IMMEDIATELY SO IT IS FLUSH WITH THE SURFACE OF THE WALL COVERING.
7. REMOVE THE MASKING TAPE FROM BOTH SIDES OF THE JOINT.

**NOTE:** EXCESS CAULKING ON THE WALL COVERING SHOULD BE REMOVED AS SOON AS POSSIBLE WITH WARM WATER AND A CLEAN CLOTH.

**NOTE:** USE STANDARD COLORFLEX II CAULK IF A SECOND COAT IS REQUIRED. PLEASE FOLLOW THE SAME INSTALLATION PROCEDURE WHEN APPLYING THE SECOND COAT. ALLOW A MINIMUM OF FOUR HOURS TO CURE BEFORE APPLYING THE SECOND TOP COAT.

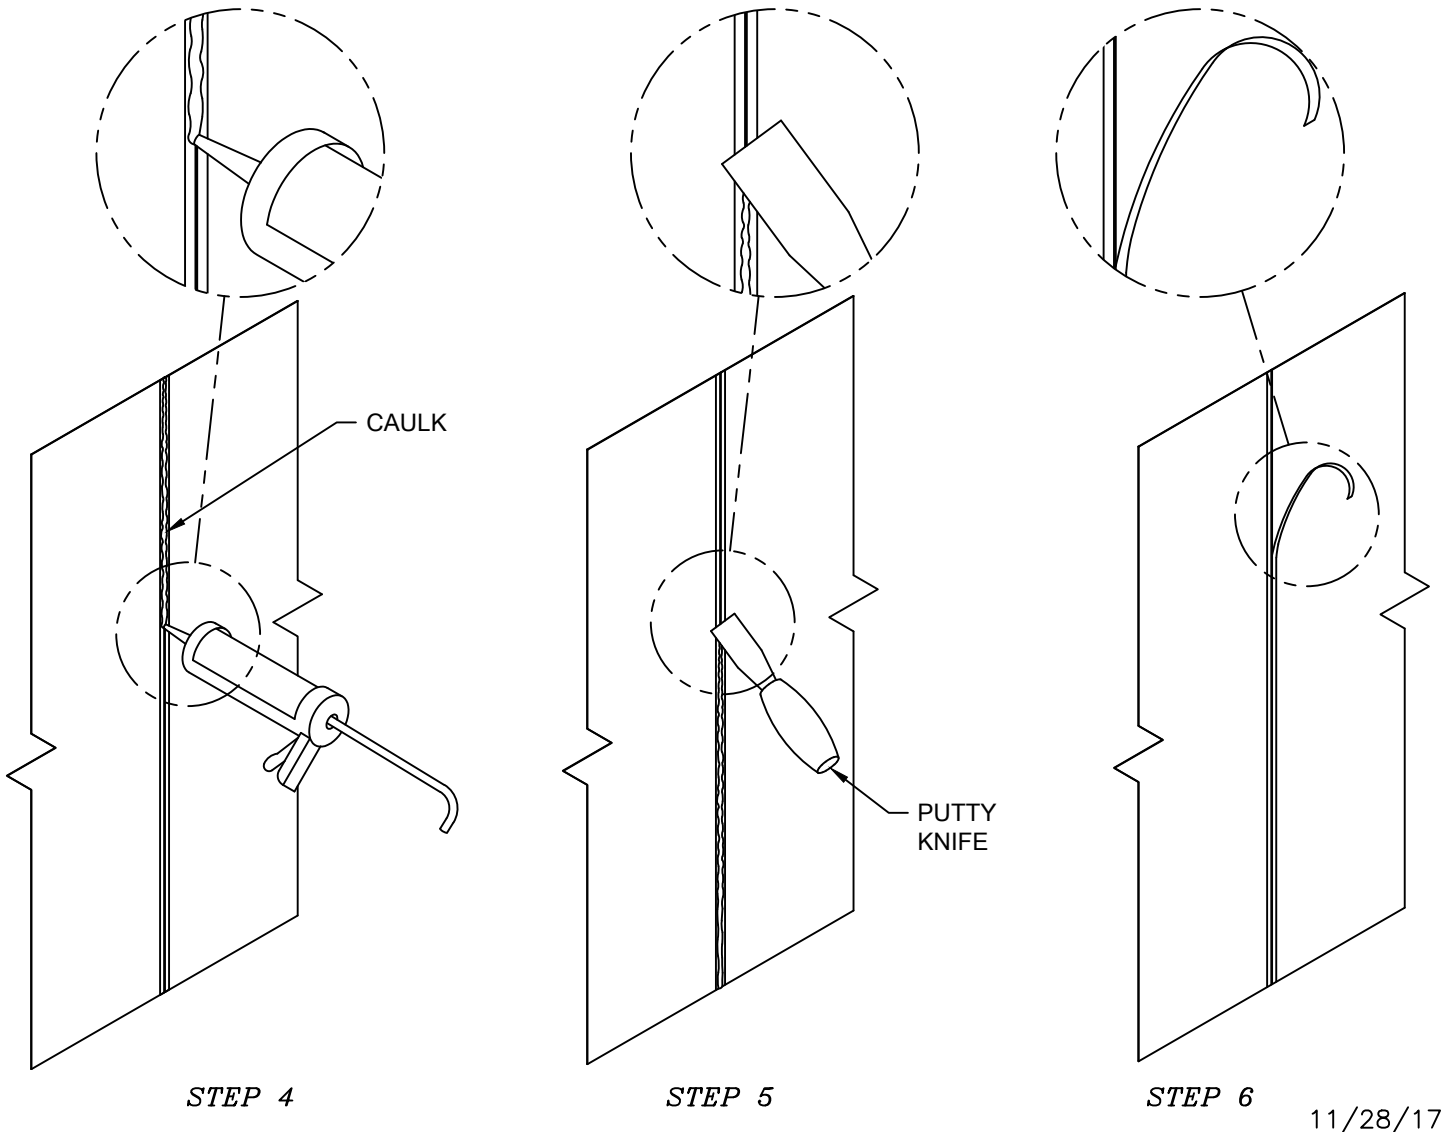

11/28/17