


## PLEASE READ

PLEASE READ THESE INSTRUCTIONS THOROUGHLY PRIOR TO BEGINNING THE <u>FRWS-2 FEATURE RAIL</u> INSTALLATION!

THIS INSTRUCTION SHEET IS INTENDED TO PROVIDE A SPECIFIC GUIDE TO FOLLOW FOR THE INSTALLATION OF THIS <u>FRWS-2 FEATURE RAIL</u>. CONTAINED WITHIN IS THE TECHNICAL INFORMATION AND INSTALLATION TECHNIQUES REQUIRED TO COMPLETE AN EFFICIENT, NEAT AND LONG-LASTING INSTALLATION.

INSPECT ALL MATERIALS FOR DAMAGE OR MISSING PARTS. IF YOU DISCOVER DAMAGED OR MISSING MATERIALS, IN THE USA PLEASE NOTIFY THE FACTORY AT (800) 233-8493, AND IN CANADA (888) 895-8955 FOR CUSTOMER SERVICE.

FRWS-2 FEATURE RAIL MUST BE INSTALLED IN ACCORDANCE WITH THESE INSTRUCTIONS! FAILURE TO FOLLOW THESE INSTRUCTIONS MAY VOID ANY PRODUCT WARRANTIES AND RESULT IN AN UNSUCCESSFUL INSTALLATION. FOR SPECIFIC QUESTIONS REGARDING THE INSTALLATION OF THIS FRWS-2 FEATURE RAIL PLEASE CALL THE FACTORY IN THE USA AT (800) 233-8493 OR EMAIL IWPTECHSUPPORT@C-SGROUP.COM. IN CANADA CALL (888) 895-8955.

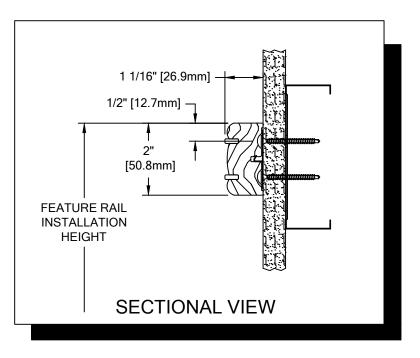

## IMPORTANT NOTES

- 1. THIS MATERIAL HAS BEEN MANUFACTURED TO CUSTOMER SPECIFIED DIMENSIONS AND CAN NOT BE CUT OR MODIFIED ON SITE. TO DO SO COULD VOID THE WARRANTY.
- 2. ALL DIMENSIONS ARE TYPICAL.
- 3. FOR DRYWALL/PLASTER WALL CONSTRUCTION, IT IS RECOMMENDED FOR FASTENERS TO BE ENGAGED INTO METAL/WOOD STUDS TO MAINTAIN MAXIMUM PULLOUT STRENGTH. IF DURING INSTALLATION YOU ENCOUNTER SPECIAL WALL CONDITIONS THAT DO NOT ALLOW FOR DIRECT ATTACHMENT TO THE STUDS PLEASE CONSULT THE LOCAL AUTHORITY HAVING JURISDICTION.
- 4. AF-6 PLASTIC ANCHORS SHOULD SEAT FLUSH WITH GYPSUM WALL.
- 5. MATERIAL MUST REACH 65°F MIN. TO 75°F MAX. 24 HOURS PRIOR TO INSTALLATION. THIS IS ESSENTIAL TO MINIMIZE EXPANSION AND CONTRACTION.
- 6. FEATURE RAIL SPLICE SHOULD NOT EXCEED 4" [101.6mm] DISTANCE FROM A WALL MOUNT CLIP.
- 7. THIS RAIL REQUIRES A <u>MINIMUM</u> OF 2 MOUNTING BRACKETS PER UNIT. THE <u>MINIMUM</u> END CAP-TO-END CAP CRASH RAIL LENGTH IS 5 1/2" [139.7mm].
- 8. FOR MORE INFORMATION ON FRWS-2 FEATURE RAIL SEE OUR WEBSITE AT www.c-sgroup.com.






WOOD FEATURE RAIL

(24W378xxx)

FRWS-2 STAINLE

FRWS-2 STAINLESS STEEL INSERT (24S066000)




STAINLESS STEEL END CAP OP (24S240000)



OPTIONAL WOOD END CAP (24W379xxx, LH) (24W380xxx, RH)

FASTENER #1 #12 X 1" S/S PHILLIPS PAN HEAD SMS (90H716002)



ACCENT REVEAL (24F221004)




RETAINER CLIP (24M050000)

WALL CONDITION	SPECIFIED FASTENER	DRILL DIAMETERS		CS PART
		WALL	RETAINER	NUMBER
STEEL STUD/GYPSUM WALL	#10 x 1 1/2" PHILLIPS PAN HEAD SMS AF-6 PLASTIC ANCHORS	1/4"	9/32"	90H189002 90H039004
CONCRETE/CONCRETE BLOCK	#10 x 1 1/2" PHILLIPS PAN HEAD SMS AF-6 PLASTIC ANCHORS	1/4"	9/32"	90H189002 90H039004
WOOD STUD/GYPSUM WALL	#10 x 2-1/4" PHILLIPS PAN HEAD SMS	N/A	N/A	90H421008
20 GA. MIN. STEEL STUD AND 20 GA. MIN. STEEL STRAPPING / GYPSUM WALL CONSTRUCTION REQUIRED (TEK SCREWS)	#6 PHILLIPS BUGLE HEAD TEK SCREW	N/A	N/A	90H079002




## LAYOUT VIEW

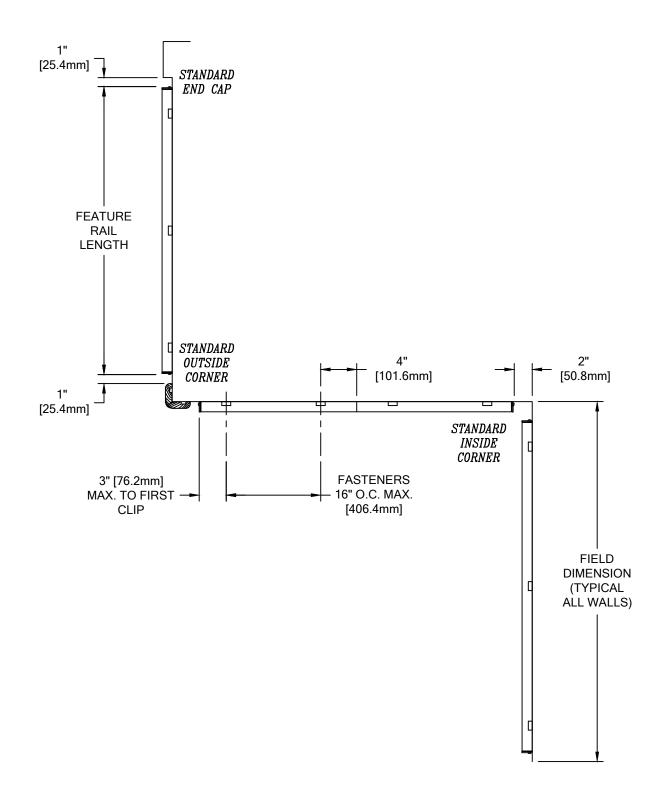

FRWS-2 FEATURE RAIL

**Construction Specialties**\*\*

## TYPICAL ASSEMBLY

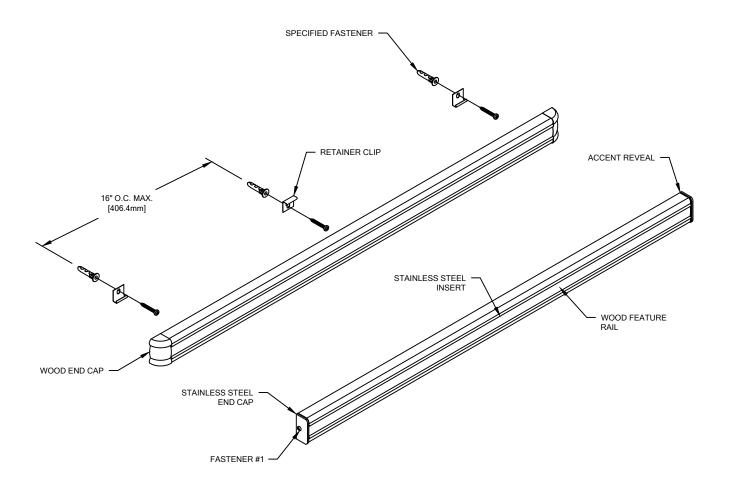

- 1. ESTABLISH FEATURE RAIL HEIGHT ABOVE FINISH FLOOR. FROM THE TOP EDGE OF THE FEATURE RAIL DEDUCT 1/2" [12.7mm] AND 1" [25.4mm] AND SNAP A CHALK LINE AT THESE HEIGHTS. THIS MARKS THE LOCATION OF THE FASTENERS FOR THE RETAINER CLIPS.
- 2. DETERMINE WALL FASTENER LOCATIONS BY USING THE REQUIRED DEDUCTIONS (SEE LAYOUT VIEW) AND DRILL HOLE DIAMETER IN THE WALL FOR SPECIFIED WALL FASTENERS. REFERENCE CHART ON PAGE 2 FOR CORRECT DRILL DIAMETERS.
- 3. INSTALL EACH RETAINER CLIP ONTO THE WALL (ALTERNATING UP AND DOWN, NOTE THE CLIP ORIENTATION ABOVE), IN SUCCESSION, USING THE APPROPRIATE FASTENERS. USE A LEVEL TO ENSURE RETAINER CLIPS ARE LEVEL.

WARNING: BE SURE RETAINER CLIPS AND FEATURE RAIL ARE IN CORRECT LOCATION. ONCE FEATURE RAIL IS INSTALLED, IT WILL BE DIFFICULT TO REMOVE WITHOUT DAMAGING FEATURE RAIL, WALL AND/OR RETAINER CLIPS.

4. TO INSTALL FEATURE RAIL, BEGIN CLIPPING FEATURE RAIL TO WALL AT ONE END AND WORK YOUR WAY DOWN THE LENGTH OF THE RAIL. USE A SOFT RUBBER MALLET TO TAP THE FACE AT CLIP LOCATIONS TO SEAT THE FEATURE RAIL ONTO THE RETAINER CLIPS. BE CAREFUL NOT TO DAMAGE THE FEATURE RAIL. SEE SECTIONAL VIEW FOR ALIGNMENT. THOROUGHLY CLEAN FEATURE RAIL UPON COMPLETION OF INSTALLATION.



Muncy, Pennsylvania • (800) 233-8493 • Fax (570) 546-5169 Mississauga Ontario • (888) 895-8955 • Fax (905) 274-6241 www.c-sgroup.com 10/06/2023

This document is the property of Construction Specialties, Inc. and contains CONFIDENTIAL PROPRIETARY INFORMATION that is not to be disclosed to third parties and is not to be used without approval in writing from Construction Specialties, Inc.