


| HUSH Curtain®


CLEAN-IN-PLACE® CURTAINS

Clean-In-Place® curtains never need to be laundered. They have an incorporated controlled release antimicrobial additive which allows the migration of the antimicrobial agent to the fabric surface which is effective for the life of the product. Most phenolic or quaternary type disinfectants, provided they are applied in concentrations recommended by the manufacturer, may be used.

1. A simple solution of neutral soap and lukewarm water is all that is required for cleaning.

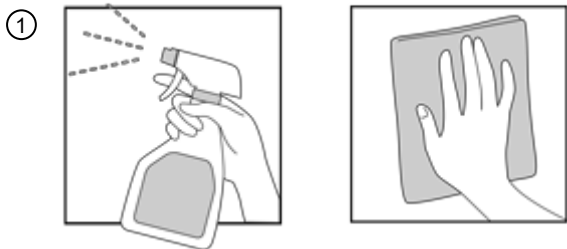

2. Do not launder or use harsh cleansers, solvents or detergents. Disinfectants applied at full concentration or in highly concentrated solutions may damage the fabric.

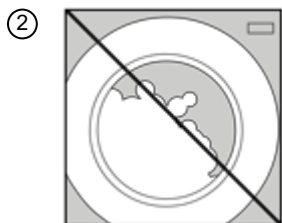


FABRIC CURTAINS

PREPARATION


1. Unzip each HUSH Curtain® panel section from one another.
2. Remove the curtains from the track leaving the slider/trolleys in the track.
3. Safely transport to the laundry facility.

DO NOT LAUNDRER THE ACOUSTIC BAFFLES

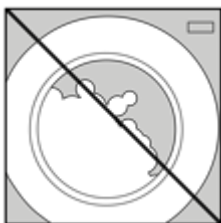

| HUSH Curtain®

1. Prior to laundering, carefully remove each inner HUSH Curtain acoustic baffle from the pockets of the curtain shell.

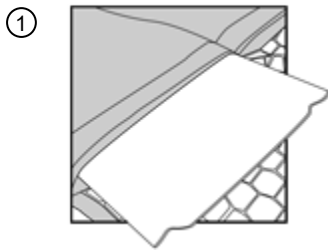

2. Store the acoustic baffles in a clean, sanitary area during the curtain shell cleaning procedure.
3. Use a disinfectant wipe (low concentration bleach based, e.g. Clorox DISPATCH™) if needed.
4. Allow to dry completely prior to re-insertion into the HUSH fabric panel.

CLEANING

Launder and dry the curtain shells according to the HUSH Curtain laundry instructions below unless otherwise provided based upon the shell panel fabric selected:

1. Machine wash with mild soap or detergent, on a synthetic setting with high water levels and mild agitation.
2. Water temperature should not exceed 160°F.
3. Do not use bleach or fabric softener.
4. Wash with like materials. Extract gently.
5. Air, cabinet, or tumble-dry on a synthetic cycle at a low temperature.
6. Do not exceed 140°F for more than 3–5 minutes.
7. Hang or fold immediately after drying.

Failure to follow exact laundry directions and temperatures will void the product warranty.

REINSTALLATION

1. Re-insert each acoustic baffle into the patented curtain shell pockets from the top, open end.
2. Ensure the top end of the curtain pocket is tucked into the top envelope flap.
3. Once re-installed in the cubicle, zip together each HUSH Curtain section starting at the top.